

# GEViCAM OPERATIONS MANUAL

**Preliminary**

## GD SERIES

**Dual-tap Giga-bit Ethernet Cameras**



**GD-155000**

***GEViCAM Inc.***

***A GigE Vision Camera Company***

Rev: Ver. A.0.2  
Date: 8-17-07

### **Disclaimer and Notice**

The material contained in this manual consists of information that is proprietary to GEViCAM Inc. and may only be used by purchasers of the products. GEViCAM Inc. makes no warranty for the use of its product and assumes no responsibility for any errors which may appear or for damages resulting from the use of the information contained herein. GEViCAM Inc. reserves the right to make changes without notice.

### **Warranty**

All of our solid-state cameras sold in North America have a full three-year warranty. Those sold elsewhere have a full one year warranty. If any such product proves defective during the warranty period, GEViCAM Inc. will repair the defective product without charge for parts and labor or will provide replacement in exchange for the defective product. This warranty shall not apply to any damage, defect or failure caused by improper use or inadequate maintenance.

### **Certifications**

#### **CE Compliance**

The GEViCAM platform including GP-3360, GP-2360, GP-3780 and GP-21400 cameras has been certified to conform the requirement of Council Directive 89/336/EC for electromagnetic compatibility and to comply with the following European Standards;

Immunity:	EN50082 –2/1997
Emission:	CISPR22: 1997/EN55011: 1998 Class B

All GEViCAM products bearing the CE mark have been declared to be in conformance with the applicable EEC Council Directives. However, certain factory-installed options or customer-requested modifications may compromise the electromagnetic compatibility and affect CE compliance. Please note that the use of inter-connect cables that are not properly grounded or shielded may affect CE compliance.

#### **FCC**

This equipment has been tested and found to comply with the limit for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference at his expense.

#### **Warning**

Changes or modifications to this unit not expressly approved by the party responsible for FCC compliance could void the user's authority to operate the equipment.

## Table of Contents

<b>1</b>	<b>Introduction</b>	<b>Page</b>
1.1	Product Family Description	6
1.2	Features and Benefits	
1.3	GigE Vision Standard Compliant Models	
1.4	System Configuration	7
1.4.1	Camera Power Requirement	
1.4.1.1	GPIO Connector	
1.4.1.2	RJ-45 Connector	
1.4.2	PC Requirement	
1.4.2.1	PC Basic Requirement	
1.4.2.2	Network Adaptor	
1.4.2.3	Ethernet Switch	
<b>2</b>	<b>Installation</b>	<b>8</b>
2.1	Camera Setup	
2.1.1	Getting started	
2.1.2	Connect power	
2.1.2.1	GPIO Pin Assignment	
2.1.2.2	RJ-45 Connector and Ethernet Cable	
2.1.2.3	Cable Assembly and Power Supply	
2.1.3	Lens Mount and Lens Selection	
2.2	Driver Installation	9
2.2.1	PC Software	
2.2.2	Install High Performance Driver	
2.2.2.1	Ver 2.2.1 High Performance Driver	
2.2.2.2	Ver 2.3.1 e-Bus Driver (Recommended)	10
2.2.2.3	Connecting Ethernet and Open Coyote Application	
<b>3</b>	<b>Operation (Camera Control Section)</b>	<b>11</b>
3.1	GigE Camera Function Blocks	
3.2	Coyote Application Software (Ver. 2.3.1.)	12
3.2.1	Launch Coyote Application	
3.2.2	Configure Camera Control	13
3.3	Basic Camera Control, Register-base Control	14
3.3.1	Gain and Black Level Control	
3.3.1.1	Gain Control	
3.3.1.2	Black Level Control	
3.3.1.3	Dynamic Range and S/N Ratio	
3.3.2	Data Output Modes	
3.3.2.1	12-bit, 10-bit, 8-bit Linear Output	
3.3.2.2	8-bit LUT (Gamma) Output	
3.3.2.3	16-bit Data Conversion	
3.3.2.4	Test Pattern Generator	15
3.3.3	Asynchronous Reset and No-delay Reset	
3.3.3.1	H and V Async Reset	
3.3.3.2	Trigger Mode Selection	
3.3.4	Exposure Control	
3.3.4.1	Programmed Exposure Control	
3.3.4.2	Pulse-width Exposure Control	16
3.3.4.3	Internal Exposure Control Pulse Generator	
3.3.5	Full Scan and Partial Scan	
3.3.5.1	Full Scan	
3.3.5.2	Partial Scan	
3.3.5.3	ROI Setting in Frame Grabber Function	

## Table of contents (continue)

**Page**

3.3.6	Strobe/ Internal Exposure Signal Output .....	16
3.3.7	Back-to-back Strobing .....	17
3.3.8	Multiple Frame Capture (ITS Mode) and Bracketing Exposure	
3.4	Advanced Camera Functions (Hardware Description)	
3.4.1	RS-485 Interface	
3.4.1.1	RS-485	
3.4.1.2	CAN Device Control .....	18
3.4.2	Opto-isolated I/O	
3.4.3	Audio CODEC I/O	
3.4.4	Temperature Sensor	
<b>4</b>	<b>Operations (Frame Grabber Section .... GigE Interface) .....</b>	<b>19</b>
4.1	General Description of GigE Interface	
4.2	Related Documents	
4.3	Functions and Features	
4.4	Camera Configuration and Control .....	20
4.4.1	Camera Interface (Select Camera)	
4.4.2	Pixel Format and Image Size Selection	
4.4.3	Port Control (Serial Port Control for Camera Functions) .....	21
4.4.4	Color Camera .....	22
4.4.5	Save Configuration Parameters to Flash	
4.5	Image Capture and Save .....	23
4.6	GPIO (Programmable Logic Control) .....	24
4.6.1	Programmable Logic Controller Functions	
4.6.1.1	PLC Main Block	
4.6.1.2	Configuring PLC Functions .....	25
4.6.1.3	Signal Routing Block	
4.6.1.4	LUT	
4.6.1.5	Programming Pulse Generator .....	26
4.6.1.6	Enhanced Function Block Connections .....	27
4.6.1.7	Programming PLC Control Bit	
4.6.1.8	Other Programmable Logic Controller Function .....	30
4.6.2	GPIO Connector and Cables	
4.6.3	GPIO Input and Output .....	31
<b>5</b>	<b>Camera Control Command and Register Map .....</b>	<b>32</b>
<b>6</b>	<b>SDK .....</b>	<b>33</b>
6.1	SDK (Software Development Kit)	
6.2	Upgrade	
<b>7</b>	<b>Troubleshooting</b>	

## APPENDIX

<b>8</b>	<b>Specifications</b>	<b>Page</b>
	8.1 Electrical	34
	8.2 Power Consumption and Thermal consideration	
	8.3 Mechanical	35
<b>9</b>	<b>Pleora Document Lists</b>	<b>36</b>
	9.1 iPort Coyote	
	9.2 iPort IP Engine Instruction	
	9.3 e-Bus Instruction Quick Start	37
	9.4 iPort Instruction Quick Start	
	9.5 What's New in Version 2.3.1	
	9.6 PLC (Programmable Logic Controller) Reference	
	9.7 Troubleshooting Guide	38

### List of Figures and Tables

		Page			Page
Fig. 1	MDR-14 Connectors	8	Fig. 2	PSC 12	8
Fig. 3	GPIO, Industrial RJ-45 Cables	8	Fig. 4	Device Manager	9
Fig. 5	Locate File	9	Fig. 6	Pro/1000 Grabber Driver	9
Fig. 7	Driver Selection	10	Fig. 8	Coyote Connection Detect	10
Fig. 9	IP Engine Selection	10	Fig. 10	Set IP Engine IP Address	10
Fig. 11	Coyote Connection	10	Fig. 12	Camera Function Blocks	11
Fig. 13	High Performance IP Address	12	Fig. 14	Camera Selection	12
Fig. 15	Configuration, Image	12	Fig. 16	Configuration, Pixel	12
Fig. 17	Coyote Acquisition	12	Fig. 18	Port Communication	13
Fig. 19	Camera Gain Register Code	12	Fig. 20	Async Trigger Timing	16
Fig. 21	Internal Reset Delay	16	Fig. 22	Back-to-back Strobe Timing	17
Fig. 23	GPIO Board	18	Fig. 24	Select Camera	20
Fig. 25	Acquisition	20	Fig. 26	Pixel Depth	20
Fig. 27	Image Size	20	Fig. 28	Port Communication, Read	21
Fig. 29	Port Communication, Write	21	Fig. 30	RGB Starting Pattern	22
Fig. 31	RGB Filter	22	Fig. 32	Save Configuration to Flash	22
Fig. 33	Save State to Flash	22	Fig. 34	Grab Continuous	23
Fig. 35	Image Saving, File format	23	Fig. 36	PLC Main Block	24
Fig. 37	GEViCAM PLC Block	24	Fig. 38	Configuration, IP Engine	25
Fig. 39	Signal Routing Block, I/O	25	Fig. 40	Signal Routing Block, LUT	25
Fig. 41	Enhanced Func. Block, Trigger	26	Fig. 42	Coyote, IP Engine	26
Fig. 43	Pulse Generators	26	Fig. 44	Enhance Function Blocks	27
Fig. 45	PLC Control Bits	27	Fig. 46	Pulse Generator 0, LUT	28
Fig. 47	Pulse Generators	28	Fig. 48	PLC Control Bits	28
Fig. 49	Delayer Block	29	Fig. 50	Delayer LUT	29
Fig. 51	Pulse Gen / Delayer	29	Fig. 52	Pulse Generators	29
Fig. 53	Back Plate	30	Fig. 54	MDR-14 Connectors	30
Fig. 55	GPIO Industrial RJ-45 Cables	30	Fig. 56	Cable Structure	30
Fig. 57	TTL Input / Output	31	Fig. 58	Opto-isolated I/O	31
Fig. 59	Mechanical Drawing	35	Fig. 60	SDK Documentation List	36
Table 1	Pin Assignment	8	Table 2	Auto-iris Connection	18
Table 3	Control Registers Address & Data	32	Table 4	Electronic Specifications	34

## **GEViCAM GigE Vision Cameras Operation Manual**

### **1. Introduction**

#### **1.1 Product Family Description:**

GEViCAM is specialized in the state-of-the-art Giga-bit Ethernet camera design and manufacturing. The **GD-series** are the dual-tap models of high performance GigE Vision camera family.

In the small and robust package, it contains two-channel digital video camera functions, frame grabber, programmable logic control, and Giga-bit Ethernet interface all together. In today's many applications, which use full advantage of digital data for image capture, process and manipulation for the best result, the GigE technology excels the most. GEViCAM family is designed to serve for the demanding and vast applications.

The high speed, high band width data output directly from camera to PC in 100m of distance eliminates the need of a frame grabber, expensive multiple cables, and a simple PLC device or industrial interfaces.

The applications cover machine vision, high security, ITS, medical and scientific field.

This base model series provide a dual-tap CCD platform for VGA, mega-pixel, and 5 to 10 Mega-pixel cameras in monochrome and RGB Bayer color.

#### **1.2 Features and Benefit**

- 1Gigabit/s high speed point-to-point transmission
- No frame grabber required for image capture
- 100m with Gigabit Ethernet cable CAT5e or CAT6
- GigE Vision standard compliance
- Field upgradeable firmware via Ethernet
- Excellent S/N (>58dB) for 12-bit, 10-bit or 8-bit output, 12 to 8-bit Gamma conversion and custom LUT
- Dynamic channel balance
- No-delay asynchronous reset with time stamp and async shutter
- GPIO for local I/O, RS-485 communication for auxiliary devices, Audio I/O
- Color (RGB Bayer) versions
- Miniature, robust package (34 x 34 x 68 mm)
- Industrial Ethernet and GPIO connectors
- Various drivers available for existing machine vision software
- Extensive software developer's kit (SDK)
- Best cost-performance GigE camera

#### **1.3 GgE Vision Standard Compliant Cameras**

The latest development of GigE Vision standard requires separate protocol from Pleora iPort protocol and the GigE Vision protocol version is called "GEV" version. There are some minor trade off from the versatile and flexible iPort protocol but GEV plays key roles to interface with many GigE compliant API software and devices as "Plug and Play" connectivity. Because of the key protocol differences, the firmware is not compatible each other and must order as the separate models. However, the SDK and control software is the same for both models.

Please refer supplemental GEV Manual for the GigE Vision compliant cameras. The GigE Vision models are marked as "GEV" or "GigE" logo.

## **1.4 System Configuration**

The GigE Vision cameras require two parts of system configurations; Camera setup and PC setup.

### **1.4.1 Camera Power Requirement**

#### **1.4.1.1 GPIO Connector**

Camera power is 12 V DC  $\pm 10\%$  and we recommend to support more than 1A on inrush current at the start-up.

The typical current consumption of GD-series is 400 mA at standby and 450 mA when it sends streamed images.

We suggest to use the industrial GPIO cable (Intercon1; GPIO-XX-PS) but the standard MDR-14 pin plug (3M;10114-3000PE) with a MDR shell can be used.

#### **1.4.1.2 RJ-45 Connector**

Data communication uses standard RJ-45. The GigE standard requires CAT-5e or CAT-6 Ethernet cables.

Either Patch cable or Cross cable works for the camera interface. We suggest using the industrial GigE cable (Intercon1 GigE cable; GEVPT-XX-P) for the secure and reliable operations.

### **1.4.2 PC Requirement**

#### **1.4.2.1 PC Basic Requirement**

To achieve the full bandwidth of the GigE Vision cameras, a PC must have at least

- 1.4 GHz or faster CPU (Pentium 4, Athlon)
- Windows 2000, XP Professional, or Red Hat Linux (custom application)
- More than 128M Byte of RAM
- A GP video card supporting DirectX 8.1 and not using shared memory (See Pleora documents; A normal video card works but with less efficiency of the CPU performance.) Built-in graphic card in a laptop or general PC may not be able to display full resolution of GD-155000. Reduced image size for display format may be required.

#### **1.4.2.2 Network Adaptor**

A PC must have a GigE NIC (Network Interface Card) to achieve full performance. Each NIC card contains an Ethernet PHY chip made by various companies. For the best performance, we suggest using the Intel Pro1000 NIC. With the Pleora e-Bus Driver, other NIC can be also used.

See driver installation section.

We recommend the following network adaptors;

Intel Pro/1000 MT Desktop Adaptor (32-bit PCI),  
Intel Pro/1000 MT Server Adaptor (64-bit PCI-X),  
Intel Pro/1000 MT Dual and Quad Port Server Adaptors.

#### **1.4.2.3 Ethernet Switch**

Since the GigE Vision standards comply with the Internet Protocol, the products should work with standard switches. However, machine vision industry requires jumbo-packet handling thus limits the selection of applicable switches.

The following switches have been suggested by Pleora.

3COM	3C1740x (3800 Family)
	3C1770x (4900 Family)
DLINK	DGS-10xxTx 10/100/1000 Family
	DGS-3308-FG, DGS-3308-TG
CISCO	WS-C3750G-12S-S

The above list may change from time to time. Please contact GEViCAM or Pleora for the updated models.



## 2. Installation

### 2.1 Camera Setup

#### 2.1.1 Getting started

We recommend you to save the original packing cartons for camera and accessories in case you need to return or exchange an item. It is a good idea to bench-test the products prior to the field installation. GEViCAM cameras have highly integrated functions and do not need many add-ons. However, please check the product items and options or accessories if you ordered them.

#### 2.1.2 Connect Power

##### 2.1.2.1 GPIO Pin Assignment

The GPIO connector is MDR-14 and the mating plug is 3M's P/N 10114-3000PE or equivalent. Apply +12VDC ( $\pm 10\%$ ) to pin 8 and return (Power GND) to pin1. (Table 1) (Fig.1)

Once the polarity is confirmed, power up the camera. The current consumption is around 350mA without connecting Ethernet cable to PC.

##### 2.1.2.2 RJ-45 Connector and Ethernet Cable

Connect a CAT-5e or CAT-6 Ethernet cable to camera and PC.

The Ethernet connector has two green LEDs built-in. They are not power indicators. They light when Ethernet cable is connected to PC. One LED brinks when the data is being transferred. Once Ethernet is connected, the power consumption goes up to 400mA range without data transfer (standby state).

##### 2.1.2.3 Cable Assembly and Power Supply

We suggest to use an industrial GPIO cable made by Intercon1. (P/N GPIO-XX-PS)

For the easy application or demonstration, the PSC12 (Power Supply with a MDR connector) is also available as our accessory item. (Fig.2)

Industrial GigE cables are also available from Intercon1. (P/N GEVPT-XX-P). These cables are available in various length (in XX m).




The strain relief of both GigE and GPIO cables are using thumb screws to secure the contacts. (Fig. 3)

#### 2.1.3 Lens Mount and Lens Selection

Standard lens mount is C-mount and CS-mount is available as option. Choose proper lens for the field of view and aperture control as optics are always important factors for good image quality. We call "**Garbage in - garbage out principle**". No matter how good the image process is, if input is not good, the final data may not be good at all. Keeping the initial image the best quality with optics and camera performance prior to the frame grabbing, is very important.

Table 1

Pin	Description	Pin	Description
1	GND (Power RTN)	8	+12VDC In
2	GND	9	Trigger In (TTL)
3	Strobe out (TTL)	10	RS-485-
4	RS-485+	11	Opto D1 in-
5	Opto D1 in+	12	Opto D2 out-
6	Opto D2 out+	13	Audio out
7	GND	14	Audio in

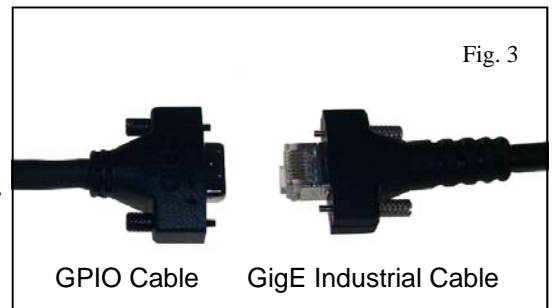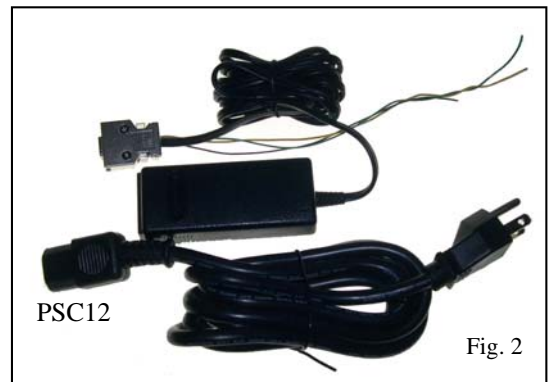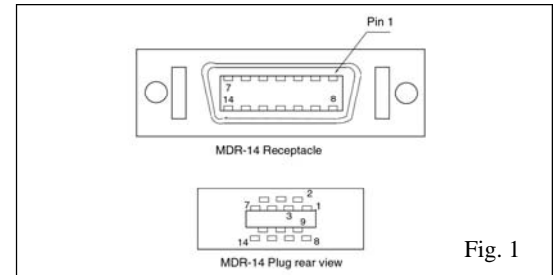



## 2.2 Driver Installation

### 2.2.1 PC Software

Use the Pleora Coyote Software to launch the High-performance Driver and GigE communication. For detailed installation of the High-performance Driver, please refer the Pleora's instruction document. The Standard Ethernet Driver (Windows Stack) has to be replaced with the High-performance Driver. The current version of driver is ver. 2.2.1 (High Performance Driver) or 2.3.1 (e-Bus Driver). The ver. 2.2.1 is recommended only for Intel NIC (Pro/1000) and whoever has already been using it. The ver. 2.3.1 works for various NIC manufacturers. You can choose either High-performance Driver or E-Bus Driver based on your system. For the new installation, we suggest to use the ver. 2.3.1.

### 2.2.2 Install High Performance Driver

At first, a GigE NIC card (Network Interface Card) is required for your PC. Intel Pro 1000 NIC card is recommended in the PC. Install from the file or download the Pleora Coyote SDK software, which contains the High-performance Driver in Pleora iPort file. For the ver. 2.3.1 installation, skip 2.2.2.1.

#### 2.2.2.1 Ver. 2.2.1 High Performance Driver

Go to "Control Panel" and open "System". Go to "Hardware" and select "Device Manager". Look for "Network adapters" and find which cards are listed. It should show "Pro/1000 network connection" or similar. Right click and select "update driver" (Fig. 4). Go to Window search for software, then select "Install from a list (advanced)". Next, select "Don't search. I will choose driver to install". It may list up available drivers and highlight "Pro /1000 Grabber driver".

If it is not listed, it may ask to find the file. Browse the file where the Pleora iPort software exists. Find "Pro 1000" (may be inside of Window NT or 2000 file) and click (Fig. 5). The High Performance Driver should be installed into the PC.

After the High Performance Driver installation, the Device Manager shows Pleora icon for the Grabber Driver. (Fig. 6)

To switch back to the original Pro/1000 network driver (Window Stack), repeat the same process by selecting "Pro1000 Grabber Device", right click and update the driver with the original version (i.e. Pro/1000 MT Server).

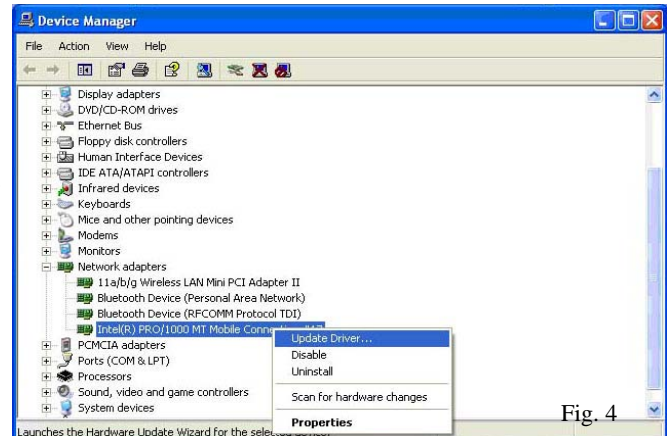


Fig. 4

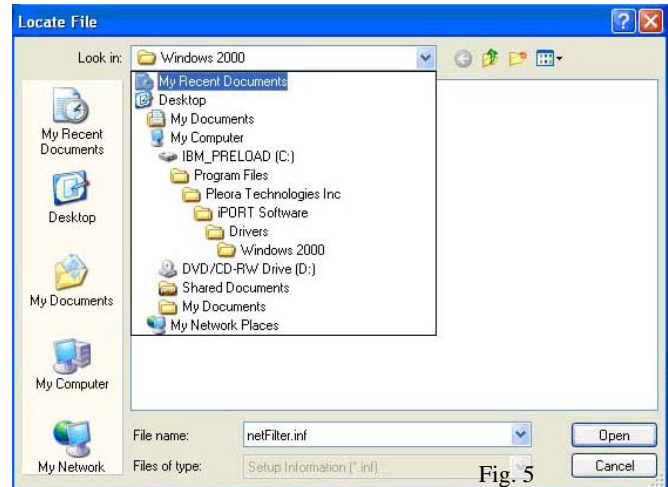


Fig. 5

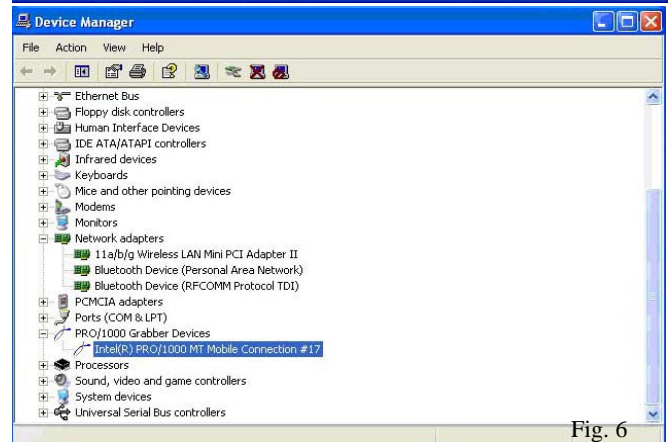


Fig. 6

### 2.2.2.2 Ver. 2.3.1 e-Bus Driver (Recommended)

Install the GEViCAM SDK ver. 2.3.1.

If you have the ver. 2.2.1 or older one installed, uninstall the driver at first and make sure iPort file of "Pleora Technologies" in the Program file is empty.

The installation creates two application icons. One is Coyote and another is Ethernet Bus Driver Tool. To allow e-Bus Driver Installation Tool to see all NICs, please make sure all the NICs have their original Window driver installed.

Follow the Ethernet Bus Installation Tool instruction and select the best driver for your system. The High performance driver is the best choice for Intel NICs. The good alternative is the e-Bus Driver with "optimal" for Intel NICs and with "universal driver" for other NICs. (Fig. 7)

Each time you change the driver, you are required to reboot the computer. **Also when you change the non-Windows stack driver, you have to install Windows stack (original driver) at first, then change to the e-Bus or High-performance Driver through the Windows stack.**

The driver installation method described in 2.2.2.1 can be also applied for the High Performance Driver of ver. 2.3.1. By doing so, you do not have to reboot your computer.

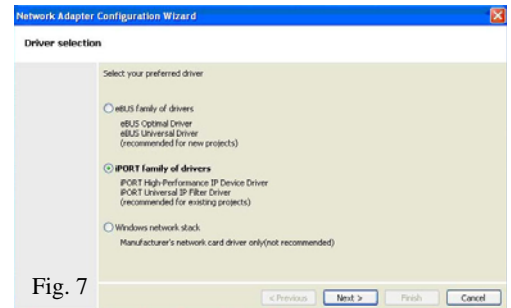


Fig. 7

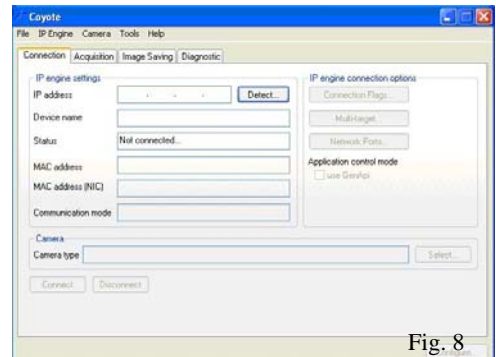


Fig. 8

### 2.2.2.3 Open Coyote Application

Connect the camera and PC with an Ethernet cable (CAT-5e or CAT-6) and power up the camera. LEDs of RJ-45 connector will be steadily ON. If not, make sure an Ethernet cable is connected to the PC. Open the Coyote Application. Coyote window appears. (Fig. 8) Press "Detect" button. It may take for a while (5 to 10 seconds) to show up IP address. (Fig. 9) Click OK.

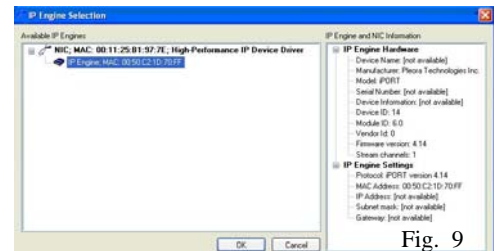


Fig. 9

Make sure there is **no Firewall** protection to this application. In order to check, go to "Control Panel" and find "Windows Firewall" icon and add the exception for Coyote application.

If it warns "subnet do not match", change the IP address of your camera to match the network address (Left two major blocks must match. Number must be from 1 to 255). In this (Fig. 10) picture, it indicates address "0" is used and you need to change to any number except for 0. Type 1 for the example.

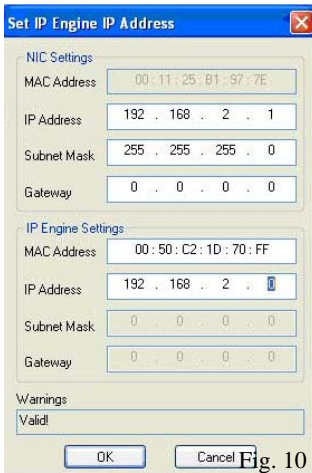


Fig. 10

Next is to select the camera type and select "standard camera link camera". GigE cameras are not camera link but the internal camera structure is using Camera Link interface signaling. (Fig. 11) Once all connections and detections are done, you are ready to see the image by opening the "Acquisition" tab and click "Start". For detailed camera configuration, see section 4.4.

For users who do not have GigE NIC cards but have a normal Fast Ethernet NIC, the same filter driver can be used with limited bandwidth. Regardless, the Coyote Filter Driver must be used (cannot use TCP-IP driver).

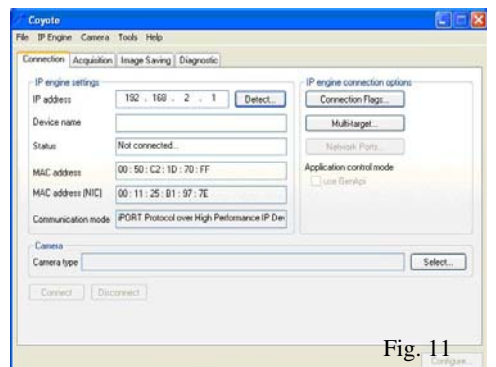


Fig. 11

### 3. Operations

#### 3.1 GigE Camera Function Blocks

- **Imager Block**

The Imager block is specific to imager type and it contains the imager driver circuit. By simply changing this block (single PC board), many types of resolution, size, characteristics of CCD and CMOS sensors are adapted to the same platform while other blocks remain in the same hardware.

- **Signal Process Block**

The signal process section is critical to the high performance and the image quality. The 12-bit high speed A/D conversion is standard for all models. On this board, a RJ-45 connector is mounted with the shortest traces from the PHY chip.

- **GigE Block**

The GigE Block consists of a FPGA, PHY and memory ICs.

- **FPGA**

- ◆ **Timing Gen Block**

This is a control logic and timing generator block for the camera. The design principle is register base and easy to reprogram various imager types without effecting other functions.

- ◆ **iPort (Pleora core) Block**

The heart of GigE interface and frame grabber function control is in this block.

- ◆ **PLC (Programmable Logic Controller)**

The GPIO function interface is called PLC as it generates necessary functions for PLC interface.

- **PHY**

A low power, small package PHY chip is used in a very dense layout. The heat dissipation is carefully removed to outside with the heat-pipe architecture for the high reliability operation.

- **Memory**

A frame grabber function requires large memory space. The standard size is 16 MB but can be extended to 64 MB as the custom option.

- **Power and GPIO**

This block seems simple but creates the major differences from other cameras. Low power consumption, extremely low noise characteristics and unique GPIO functions are the result of our expertise based on many years of design experience.

- **Easy Customization**

This is the very refined platform design and easy to build custom-design products out of these blocks. The blocks of Imager, Signal and GPIO boards are easily customized.

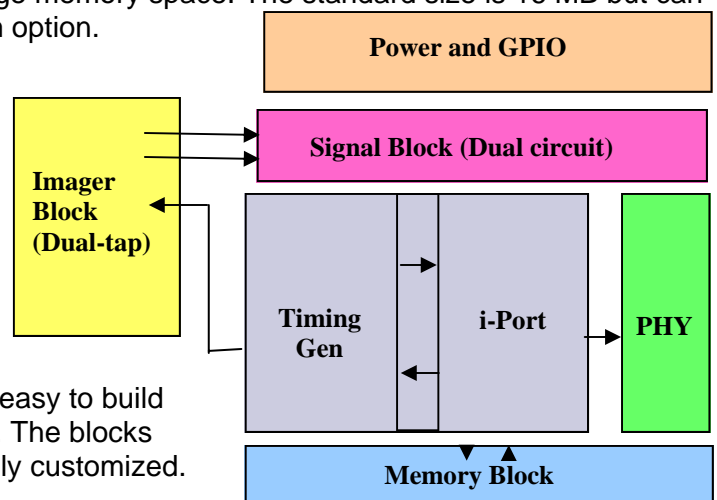


Fig. 12

Please contact GEViCAM for the specific requirement.

## 3.2 Coyote Application Software (Ver. 2.3.1)

### 3.2.1 Launch Coyote Application

Connect Ethernet cable between PC and the RJ-45 connector on the camera, and GPIO cable between the GPIO connector on the camera and the power supply. Power up the camera. Launch the Coyote image-capture-and-control software.

- Firstly, select “display this dialog at application start up” and click “OK” on application option. Coyote dialog box with “Connection” tab appears.
- Secondly, click “Detect device” and “High Performance IP Driver with MAC address” appears. (Fig. 13) Click “address” and “OK”. The IP addresses appear in the Connection dialog box.
- On “Camera”, click “Select camera”. GEViCAM cameras are designed to take the standard Pleora “camera link camera”. Click “OK”. Then click “Apply”. The IP Engine Setting information status indicates “Connected to device”. (Fig. 14)
- Select next tab “Acquisition”. Go to “Configure” and mark “Show advanced configuration pages”.
- Select “Pixel” Tab. The factory default of B/W camera output is 8-bit with Dual output format “Right Inverted”. So select 8-bit (default). And click “OK”. (Fig. 16)

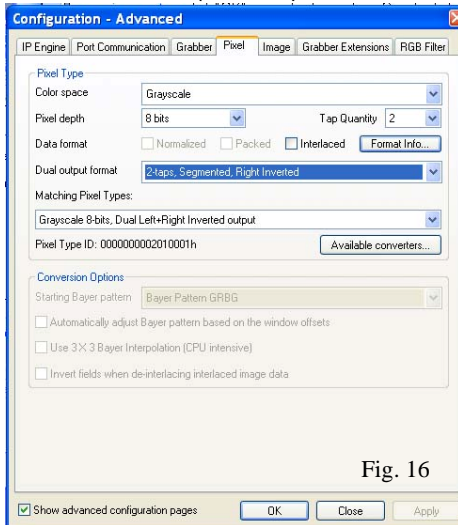


Fig. 16

- Open “Image” tab, the image size for GD-155000 is 2456 x 2058 but can be changed to smaller numbers for display limitation of PC. When smaller width is selected, Offset X must have the difference from 2456 to set number (example: for 2000 x 2000, offset X is 456). Note: The horizontal number must be increment of 4. For the quick test purpose, you can stay with the default value until you see image capturing and ready for configuration changes. (Fig. 15)

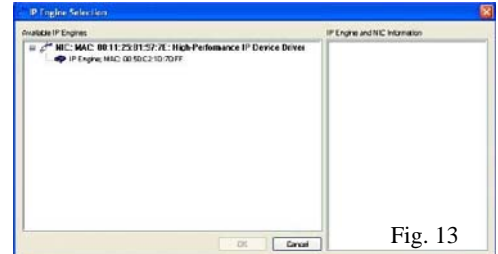


Fig. 13

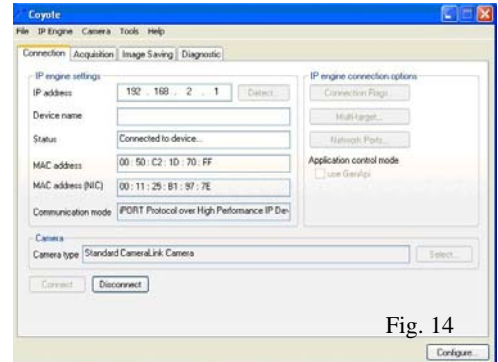


Fig. 14

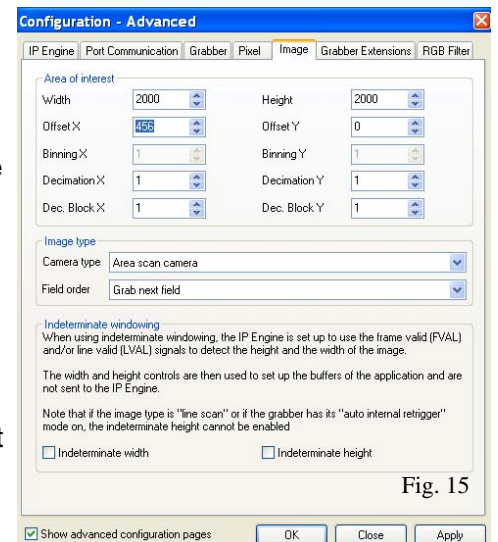


Fig. 15

For the color versions, Coyote takes only 8-bit input and Gamma 0.45 is more common for color display. So the factory default of color camera is set to 8-bit with Gamma. Select

RGB color and the starting pixel orientation. For detail of the color camera setting, please refer to “Port control” described in camera control to set the output format to 8-bit Gamma LUT and color selection in section 4.4.4.

#### • Acquisition

Now go to acquisition and select “Grab-continuous” and “Start”. You will see the live images. The grabbing information should indicate around 12 fps of image capturing for 5 Meg, 200 fps for VGA.

At this stage, the image displayed may not be perfect and you may need further camera and grabber configurations. (Fig. 17)

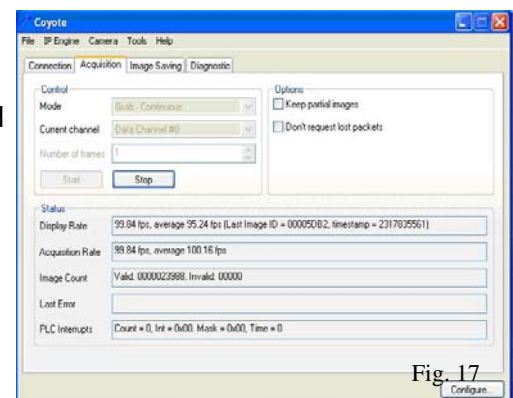


Fig. 17



### 3.2.2 Configure and Camera Control

Firstly, open "Configuration Advanced" and set up the correct image size and pixel information from each tab. Next, select "Port Communication" tab.

The port is "Serial Port 0" for this camera control. Select two locations of "Hexadecimal" marks in "Send" and "Receive". (Fig. 18)

The camera takes the command as virtual RS-232 control. "**Write**" starts with 57(hex) and "**Read**" is 52, which are equivalent to ASCII "W" and "R".

For each 8 bit, command has to be sent. Click "Send" or hit "Return" at each 8-bit input. (If you are using the ver. 2.2.0, this is only the way to send command).

For example, the register address of "**Gain Control**" is 0010 and the data of 32-bit follows. The gain value resolution is 10-bit and only changes from 0 to 1024 (10-bit). So, sending the maximum gain of 42 dB is; 00 00 03 FF.

Therefore, the sequence of the "**Write**" command is; 57-send, 00-send, 10-send, 00-send, 00-send, 03-send, FF-send.

After the completion, ACK of "06" appears.

With 42 dB of gain, you will see significantly bright but noisy images.

If you want to see the register reading, type "52" <send>, then "00" <send>, "10" <send>. You will see data of the address and ACK "0D".

In the improved version of 2.3.0, this Port Communication command can be sent as one string. Type "52" <space> "00" <space> "10" <return>. You will see the same read out as before. If you change the last "10" with "11", you will get another data reading of the black level.

It is the same process for the "**Write**" command.

Type "57 00 10 00 00 00 50" <send ( or return)>. For each 8 bit, you have to hit space bar. Make sure you set back the original gain setting, type "57 00 10 00 00 00 50" <return>.

"Configure" window shows various functions besides the "Port Communication". The detailed information is described in section 4.4.

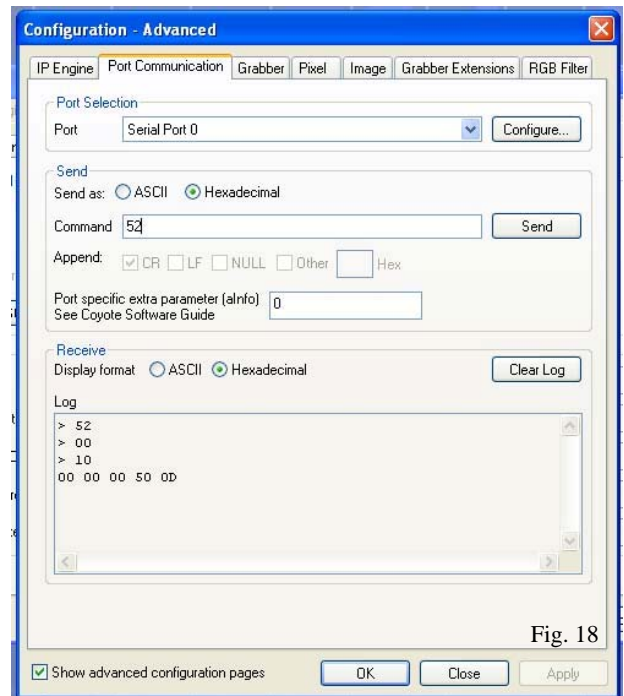


Fig. 18

### 3.3 Basic Camera Control Register-base Camera Control

The GEViCAM platform is register base. The command control is done with the 16-bit of address and the 32-bit of data in hexadecimal. To send the “**Gain**” command of 255 (15dB) as an example, start with the “**Write**” command “57” followed by the address “00 10” and the data “00 00 00 FF”. It receives acknowledgement of “06” after the completion of command. The “**Read**” command is “52”.

#### 3.3.1 Gain and Black Level Control

##### 3.3.1.1 Gain Control (**GainRaw**):(0010)

The camera gain is controlled in the 10-bit resolution from 6 dB to 42 dB (0~3FF). The variable gain amplifier is set by;

$$VGA\ Gain\ (dB) = (VGA\ code \times 0.035\ dB) + 5.3\ dB$$

##### 3.3.1.2 Black Level Control (**BlackLevelRaw**):(0011, 0019)

The video black level control is in the 8-bit resolution from 0 to 16 digital value out of 255 (0~FF). The factory default is set at 4.0 (digital value)

##### 3.3.1.3 Dynamic Range and S/N Ratio

The GEViCAM platform is set the factory default at the best dynamic range. Since the platform performs at very low noise floor providing overall signal to noise ratio of **60 dB**, the cameras are set to operate for the widest dynamic range in the 12-bit resolution. Because of such a low noise floor, the images, which may look too dark to human eyes, still contain very good signal once it is enhanced. On the contrary, if high gain is used, the dark image may be visible but other brighter sections will be saturated and lost. Our **concept of a digital imaging camera is to provide the best signal to noise ratio** and use full advantage of digitization for post image processing (can be real time).

However, those who need high gain operation, it has Max. 42 dB of internal gain adjustment, which is extremely high gain!

The simplest measurement of S/N Ratio is using black level data deviation (standard-deviation) in a large region of interest (ROI). The specific definition of SNR is  $20 \log (255 / \text{rms-noise})$  and rms-noise can be replaced by standard-deviation;  $SNR = 20 \log (255 / \text{standard-deviation})$ . 255 is saturation level in 8-bit. Temporal noise, which is averaged in frame by frame data for the exact S/N measurement, is ignored in this simple measurement. However, in the single frame, the large ROI deviation provides good representation in practical value. In the 8-bit data, the popular software such as Photoshop can measure the standard deviation.

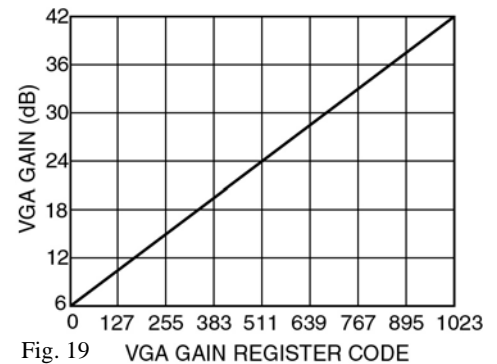


Fig. 19 VGA GAIN REGISTER CODE

#### 3.3.2 Data Output Modes (0012)

##### 3.3.2.1 12-bit, 10-bit, 8-bit Linear Output (**PixelDepth**): (00 00 00 00, - 01, -02)

The GEViCAM platform has a 12-bit high speed A/D converter and the output is selectable of 12, 10 and 8-bit (Factory Default: 8-bit). Both 10 and 8-bit conversions are done by taking the most significant bits out of the 12 bit. All black and white cameras are set at the linear output. Dual-tap output must use packed data format for 10 and 12 bit (Pixel Tab).

##### 3.3.2.2 8-bit LUT (Gamma) Output: (00 00 00 03)

The 12-bit to 8-bit conversion LUT (Look Up Table) is built in. The multiple knee Gamma (0.45) LUT is embedded for the better dynamic range but limiting dark noise. All color cameras are set the factory default to 8-bit and Gamma 0.45. Custom LUT is unloadable. See field upgrade in section 6.2.

##### 3.3.2.3 16-bit Data Conversion: (00 00 00 20)

Many image process or analysis software uses 8-bit or 16-bit raw data input. This selection allows 12-bit output to be used in 16-bit image input tool. The most significant 12-bits are used in 16-bit.

(Note: Italic description in parentheses is based on GigE Vision standard naming convention.)

### 3.3.2.4 Test Pattern Generator: (00 00 00 12)

A test pattern generator is built in. It is a useful tool to diagnose Ethernet communication and camera functions. The output is 8-bit pattern.

### 3.3.3 Asynchronous Reset and No-delay Reset:

#### 3.3.3.1 H and V Async Reset

The external trigger is a hardware trigger applied to pin #9 of GPIO connector with TTL level same as Vinit or edge trigger. The default polarity is negative going edge. Positive going edge is selectable by selecting the register (00 21 00 00 00 01).

GEViCAM has the no-delay reset capability to reset both horizontal and vertical without internal sync delay. Only a few fixed pixel-clock delays (4 clocks typical) exist as the internal logic delay. The data output delay occurs through the signal process but it is not the trigger or reset delay. The image capture is implemented with the internal no-delay reset timing thus they are always synchronized to the trigger pulses regardless the number of cameras.

This eliminates a need of phase lock loop circuit for synchronizing multiple cameras.

#### 3.3.3.2 Trigger Mode Selection (*TriggerMode*): (00 23)

In the trigger modes, there are various useful modes as follows;

##### (1) Async No-delay Trigger: (00 00 00 01)

It resets both internal H and V sync to pixel clock level.

The exposure time is programmable in each mode. The camera module outputs one FVAL equivalent pulse per trigger for the image capturing. It finishes the complete frame before resetting with the next trigger. If the trigger pulse comes in before the completion of frame data, it will be ignored. This feature avoids malfunction of image capturing caused by trigger noise and chattering.

##### (2) Pulse-width Control (*ExposureWidth*): (00 00 00 02)

It resets at both external pulse leading edge and trailing edge with no-delay reset. The exposure time is exactly the same as the pulse width between the leading edge and the trailing edge.

##### (3) Hardware or Software Trigger (*TriggerSelector*)

The trigger type is selectable as a part of PLC (GPIO) functions. The hardware trigger is TTL external trigger and the software trigger is initiated by the PLC program from the PC via Ethernet.

##### (4) Trigger Polarity (*TriggerActivation*): (00 21) (00 00 00 00, 01)

The leading edge polarity of either Falling edge or Rising edge is selectable (Factory Default: Falling edge).

### 3.3.4 Exposure Control

#### 3.3.4.1 Programmed Exposure Control: (00 24, 00 27, 00 28)

The programmed exposure control is done by electronic shutter mechanism which discharges the photodiode electrons at the trigger and starts integrating at the shutter timing by counting number of H clocks. Then the electronic charges are transferred to CCD shift registers to clocked out as video output. This mechanism is applied to all async / shutter modes in normal scan mode, async mode, and ITS mode. In essence, the electronic shutter control and exposure control is the same meaning.

#### Exposure Control (*ExposureMode*, *ExposureTimeRaw*): (00 24)

The exposure time is variable from 1n to FFFF (65535)n. "n" is number of counts of horizontal lines. (n = 1H)

VGA	5 Mega-pixel
1n = 10 $\mu$ s	1n = 32 $\mu$ s
(= 1/100,000sec)	(= 1/30,000sec)

Example: n = FF in hex = 255x32 $\mu$ s = 8.16 ms of exposure in 5 Meg-pixel.

If you want to set 1ms (1/1000 s) for 5 Meg, n = 1000/32 = 31 = 1F (Hex).

So, enter "00 24 00 00 00 1F".



### 3.3.4.2 Pulse-width Exposure Control

This is selected as Async Pulse-width Control in trigger mode (00 23, 00 00 00 02). The pulse width between the falling (leading) edge and the rising (trailing) edge is the exact period of the exposure. The pulse width is not synchronized with the internal timing such as horizontal clock but only latched with the high speed pixel clock in 25 ns of latency to reproduce identical timing as the trigger pulse. This is also useful tool for synchronizing multiple cameras triggered with a variable exposure.

### 3.3.4.3 Internal Exposure Control Pulse Generator

The Coyote software allows user to trigger GigE cameras from the PC or host. See PLC functions in section 4.6.1.

Note: Some early models may be required firmware upgrade to implement this function.

## 3.3.5 Full Scan and Partial Scan (00 23, 00 00 00 10, -11, -12, -14)

### 3.3.5.1 Full Scan: (00 00 00 00, -01, -02, -03, -04)

The basic platform of **GD-series** use the progressive scan CCD (or CMOS). The full scan image is by progressive scan, which does not reduce the resolution by capturing one frame (i.e. field image in Interlace reduces the resolution). The platform uses 40MHz x2 clocks as standard and the typical full frame rate is 200 fps for VGA, 12 fps for 5 Mega-pixel. The Coyote grabber function "image size" is set to cover the camera's active pixel data. The horizontal number is multiple of 4 and the vertical is the exact vertical pixel numbers.

### 3.3.5.2 Partial Scan: (Mode A: 00 00 00 10, -11, -12, -14 and Mode B: -20, -21, -22, -24)

The **GD-series** output the full frame images in higher frame rate than most of similar cameras but also output the partial scan images with even higher frame rate. The VGA full scan is 200 fps but 240 line partial scan outputs 380 fps. The factory set partial scan lines are 240 for the VGA, and 1380 (A) and 1080 (B) for the 5-Meg. The location of starting lines is programmable (00 26). The vertical area is variable only in horizontal line counts (Horizontal pixel number does not change). This field of view adjustment is helpful to align the point of interest without moving the camera position.

The exposure control and other functions of normal scan are also applied to the partial scan modes.

### 3.3.5.3 ROI Setting in Frame Grabber Function (Coyote Application)

Along with the camera side of partial scan, the frame grabber function of the GigE cameras can select specific size of ROI (Region of Interest). This does not help increasing the fame rate but the data transmission and bandwidth can be improved by sending small section only, which, in turn, speeds up the signal processing. See the image size setting in Coyote Application 4.4.2.

## 3.3.6 Strobe/ Internal Exposure Signal Output

For all async reset modes, the internal exposure pulse is output from the GPIO pin (Pin #3). This can be used to trigger strobe or other control devices. The output is TTL - active high.

The signal is same as the internal exposure control pulse so that it can be monitored for the exposure timing, image grabbing, and internal frame rate in each mode. The internal delay of all resets is 4 pixel clock. (Fig. 20 and 21)

Fig. 20 Async Trigger and Internal Reset Timings


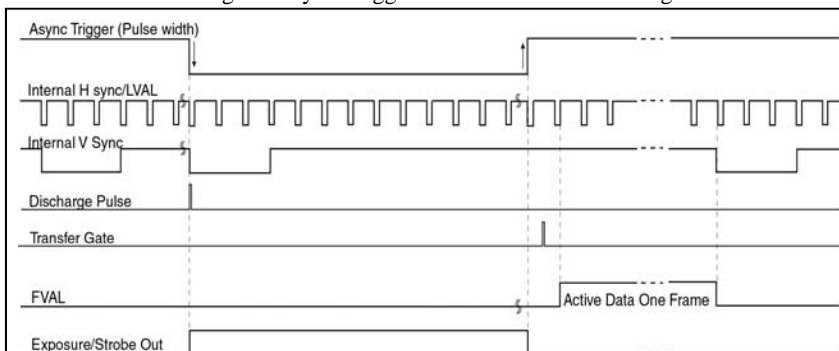


Fig. 21 Internal Reset Delay

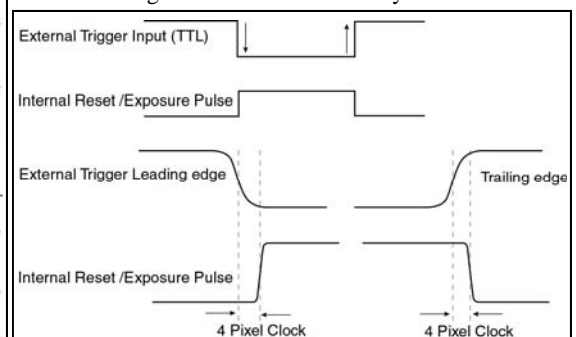

### 3.3.7 Back-to-back Strobing: (00 23 00 00 00 03), (00 25)

Two consecutive strobes per one trigger are output with a programmable interval before and after the CCD transfer gate. Thus two frame images of strobe lightings at very short interval can be captured. Since this method freezes objects in specific interval or almost simultaneously, the application is effective for high speed object motion analysis, dual lighting imaging (i.e. front-lit/back-lit, two color LED strobes, visible and IR lighting, etc.). By analyzing the two frames, it can find the particle trajectory, accurate motion speed, different angle views, different material properties, etc.

This mode is only applied to the Full Scan Mode and the programmable interval (00 25) is within the one frame period. (It can be longer as custom option such as two frames or 100ms apart).

The interval programming is;

= Number of  $(n - 2) \times 1H$  (horizontal clock)

For 1 ms interval for 5-Meg, the command is;


57 00 25 00 00 00 1B

( $n-2 = 1000/32 = 31$ ,  $n = 33 = 21$  hex).

To be precise, this gives 1.01375 ms of interval.

The minimum interval is 00 00 00 04.

This mode is only effective in the dark environment and strobe lights are only the light source.

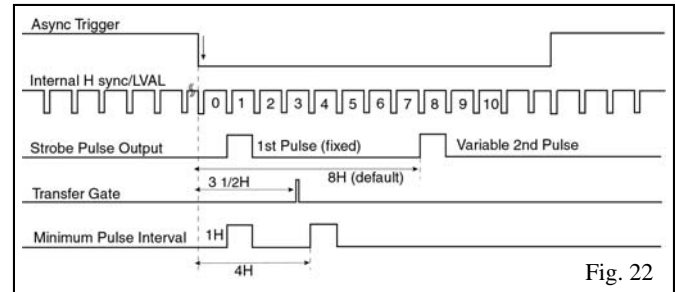

### 3.3.8 Multiple Frame Capture (ITS Mode), Bracketing Exposure: (00 23, 00 00 00 04)

This is similar to multiple-shot photography with different exposures to bracket the lighting conditions. This is a good tool for ITS license plate reading, high security identifications of critical object imaging. The number of frames being captured are programmable as well as each exposure time.

(Example; three shots per trigger with 1/250, 1/500, 1/1000s and use the best image among three)

The number of frames per trigger is programmed with (00 29) register. Currently you can choose one, two or three frames. (00 00 00 00, -02, -03 respectively). The exposure is (00 24) for the first frame, (00 27) for the second frame and (00 28) for the third frame.

## 3.4 Advanced Camera Functions (Hardware Description)

A GigE camera is powerful and it serves as a local server in a network. Besides common I/Os such as external trigger input and strobe signal output, it provides additional port controls.

The **GD-series** can handle RS-485 Serial Interface, CAN (optional), Opto-isolated I/Os, Digital Audio Input and Output, and Temperature Sensor.

### 3.4.1 RS-485 Interface

#### 3.4.1.1 RS-485

Customers can send own RS-485 serial control protocol via Ethernet. Industrial RS-485, PROFI-bus, surveillance pan-and-tilt / zoom lens control protocol, lane control signals are a few examples. A CAN device can be also used for industrial serial control. In camera control (Port control), RS-485 is using Port #1. (Port 0 is used for camera control). These serial communications are transparent between PC and camera GPIO outputs. This application is simply using an Ethernet cable to handle user's serial communications besides image transfer so that there is no specific protocol provided as part of SDK. See Port Control section 4.4.3.

### 3.4.1.2 CAN Device Control

CAN (Controller Area Network) is slightly different serial bus using the same technology as RS-485. As option, we can mount CAN device instead of RS-485 transceiver. CAN protocol must be provided by user.

### 3.4.2 Opto-isolated I/O

There are two sets of optically-isolated inputs and outputs (Fig. 23). With setting of solder jumpers J1 and J2, the IOs can be one input/one output, two inputs, or two outputs. These IOs are designed for the applications which need different voltages, used in high surge/noise environment, the signal isolation from camera body, etc. Standard setting is one input (D1=J1 open) and one output (D2=J2 short).

For input selection, J1 and J2 jumpers are open, and they are shorted (solder jumper) for output.

Factory default is open on J1 and short on J2.

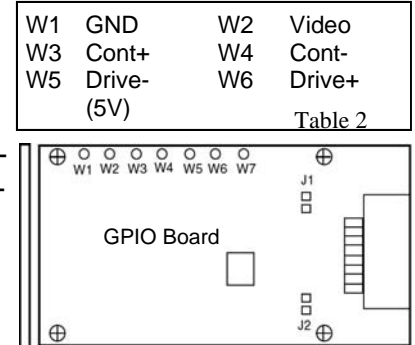


Fig. 23

### 3.4.3 Audio CODEC I/O

It has a built-in audio CODEC to handle digital audio via Ethernet. It uses the high speed serial port (Bulk port 0) to take audio stream. The input can be also used for analog input monitoring (AC coupled) in audio frequency range (10 Hz - 10 KHz) such as the Doppler speedometer, chopped DC level detection, etc. The audio input and output have no audio amp or speaker driver. Therefore, auxiliary device may be required.

The GPIO pin assignment is #13 for output, #14 for input. The full function cable uses shield cable for these pins. The signal is similar to the computer audio IO (AUX input, earphone output).

### 3.4.4 Temperature Sensor

A temperature sensor is built-in on the GPIO board to monitor internal thermal condition. It is part of internal I2C control (90 XX) and the value can be accessed by reading the register address in the Camera control port (0). Type "52" (Read) then address "90 00" for the I2C temperature sensor. You will get the data in hexadecimal. The raw data have to be converted to actual °C (binary formatted in 2's complement). The resolution of data output is 9 bit (0.5°C resolution) with one sign bit. The data are in hexadecimal and have to be converted to binary in the 9-bit resolution from MSB in 16-bit.

bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6-0
Sign bit	2 <sup>6</sup> °C/bit	2 <sup>5</sup> °C/bit	2 <sup>4</sup> °C/bit	2 <sup>3</sup> °C/bit	2 <sup>2</sup> °C/bit	2 <sup>1</sup> °C/bit	2 <sup>0</sup> °C/bit	2 <sup>-1</sup> °C/bit	all 0

For example:	Hexadecimal	Binary	Decimal	Ta (°C) = 1/2 x (Decimal)
	0FA	0111 1101 0	250	+125
	032	0001 1001 0	50	+25
	001	0000 0000 1	1	0.5
	000	0000 0000 0	0	0
	001*	1111 1111 1	-1	-0.5
	370*	1100 1001 0	-110	-55

(Negative temperature conversion is done by complimenting each binary bit and adding 1 and Sign bit is 1). \* These data indicate negative values due to the sign bit of Binary data.

Example: Type "52 a0 00" <Return>. You will see the data of 52 a0 00 00 00 00 50 0D. On the data, 50 Hex is 80 in Decimal. So the temperature is 40 °C (0D is "**Acknowledge**")

(Note: Refer the related document of MCP9800 for more details.)

## 4. Operations (Frame Grabber Section .... GigE Interface)

### 4.1 General Description of GigE Interface

Ethernet is the most popular and widely used for the digital communication method today, of which technology is proven and robust. Giga-bit Ethernet is an extension of fast Ethernet but has 1 Giga-bit band width, which has the best advantage for image processing and sending high resolution, high speed digital video to a host. It eliminates a need of frame grabber in machine vision thus cost performance improves against the conventional [Analog Camera + Frame Grabber] or [Digital Camera (Camera Link) + Frame Grabber] combination. There are numbers of benefits to go to GigE cameras in many applications

**Pleora Engine:** GEViCAM uses Pleora Technologies' engine, core and SDK.

### 4.2 Related Documents

When you open up the SDK installation, you will find a document file in Pleora Technologies' iPort or e-Bus software files (located in program file). It contains Quick start instruction, C++ SDK reference guide, iPort user's manual, Driver manual and other important information. See appendix for the detail.

### 4.3 Functions and Features

There are numbers of benefits to go to GigE cameras in many applications.

- Pleora engine: GEViCAM uses industry-leading Pleora Technologies' engine, core and SDK. Many organizations worldwide support the SDK as well as Pleora's support group.
- High Performance Driver to off-load CPU task  
The most critical parameter to choose the system is if you have enough CPU power for your image processing, other communications, display, etc. The typical CPU usage of high performance driver in streamed video transmission is less than 2% (mostly below 1%).
- Deterministic continuous data transfer at 1Gb/s for 100m or more with switches.  
The cable length is major advantage of Ethernet. This feature allows the new concept of factory process control with computers away from each machines.
- Versatile SDK to support wide range of applications  
Window OS, Linux, Various NIC card (and PHY), popular application drivers, OEM re-branding, Training class at Pleora, continuous improvement, etc. are some of the features.

#### Frame Grabber Functions:

GigE camera-interface acts as a frame grabber function and the brief specification is as follows;

- On board Memory: 16 MB (64MB as custom option)
- Programmable Logic Control:  
4 Pulse generator and Timers, 1 Rescaler, 1 Delayer, 1 Counter, Input debouncing, Timestamp generator, Timestamp trigger, Software controlled I/O, GPIO FIFO
- Serial Ports:  
Internal UART 3 ports  
(Serial Port 0=Normally used for Camera Control; Port 1= RS-485; and Bulk Port 0= Audio I/O)
- Ethernet Band-width: 1Gb/s
- Unicast and Multicast: Yes
- Static Configuration: Yes, 4.01
- BOOTP: Yes
- DHCP: Yes, 4.06
- Data Format: Gray scale (8, 10, 12, 16-bit) and Color RGB Bayer (8-bit)
- Image Size (capability): Up to 4K (H, multiple of 4) x 4K (V)
- Image capture Continuous, Single, Save images (continuous, fixed number) in various formats)
- Other Functions:  
Windowing, Decimation, Data port mapping, Pixel shifting, Pixel inversion



## 4.4 Camera Configuration and Control

### 4.4.1 Camera Interface (Select Camera)

A GigE camera interfaces the camera block and the frame grabber block. The basic structure of GigE interface is designed to keep camera block as a Camera Link signaling (not real Camera Link but signal and data format follow Camera Link definition). Therefore, the Coyote application software calls for "Standard Camera Link" as the GEViCAM connection. (Fig. 24)

In order to operate the frame grabber functions, the camera and PC must be connected, the proper driver and Coyote Application software need to be installed.

Please refer section 2 and 3 for the software and driver installation, camera setup and application software device detection.

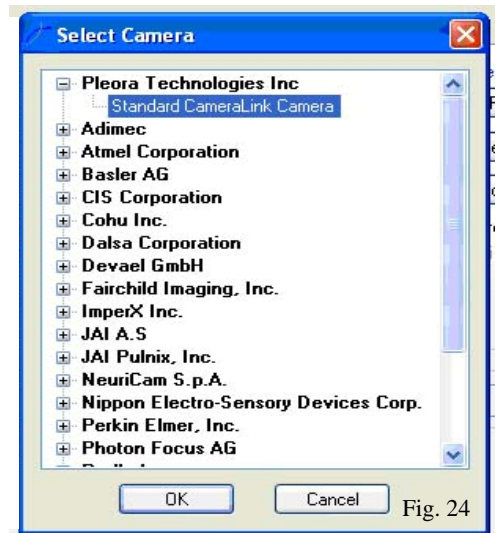


Fig. 24

Now you are ready to use the application software and control various camera functions. The **GD-series** platform can perform vast tasks beyond normal camera functions. Let's go through the Coyote application software. After all connections are done, you will see "Coyote" window. Open "Acquisition" and "start". An Image display pops up and the acquisition rate is displayed. (Fig. 25)

Next, click "Configure" button and mark "show advanced configuration page" at the bottom left.

### 4.4.2 Pixel Format and Image Size Selection

Open up "Pixel" tab and select proper data either "Grayscale" or "RGB color".

The pixel depth is selectable.

Factory Default: 8-bit. (Fig. 26)

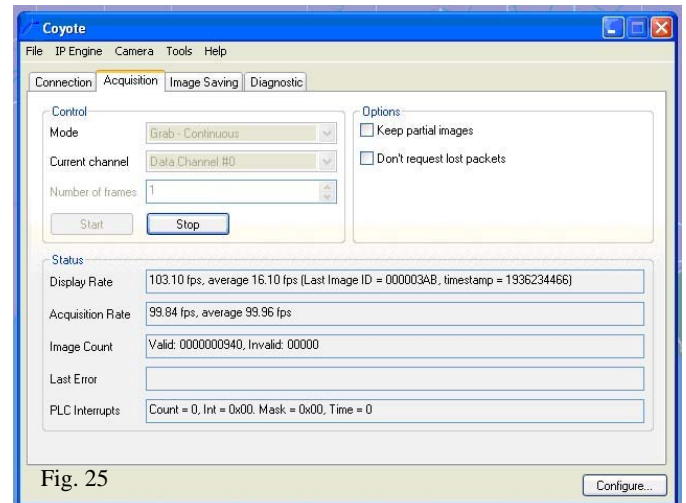


Fig. 25

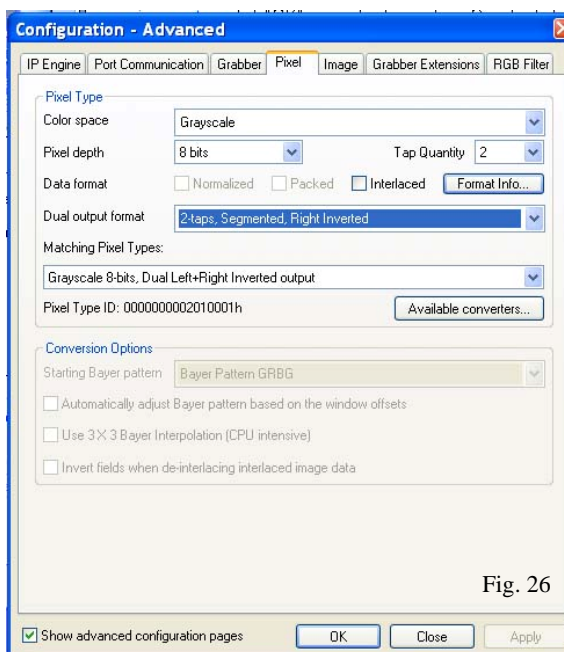


Fig. 26

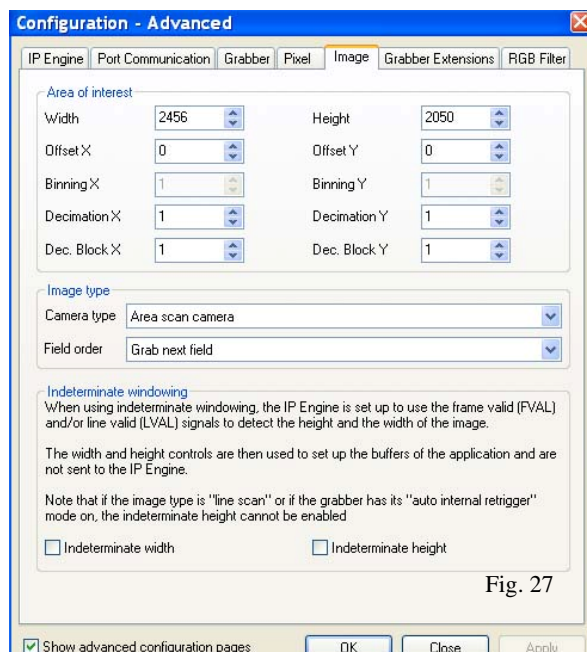


Fig. 27

Then go to "Image" tab and input the correct pixel numbers. It cannot go more than the camera output pixels (Active pixel numbers. See specification). If higher number than active pixel is selected, display may freeze. (Fig.27)

#### 4.4.3 Port Control (Serial Port Control for Camera Functions)

Camera control is done in similar way as Camera Link serial control. There are 3 separate serial ports and the camera control is using the Serial Port 0.

The **GD-series** control is register-base architecture in 16-bit address followed by 32-bit data.

**Write** command is 57 (Hex), **Read** command is 52 (Hex). All commands are in Hexadecimal. So, mark two locations of Hexadecimal selection.

In this basic command process, the communication must be done in the 8-bit packets. Each 8-bit, you have to hit the space bar. You can test by typing "52 00 10 "<send> (gain setting).

It will respond with the 32-bit data in Hex with "0D" (*Acknowledgement*).

In this example, the data is 00 00 00 50. (Fig. 28)

There are two other ports.

- Serial Port 1 is used for RS-485.
- Bulk Port 0 (high speed serial port) is used for Audio IO.

Internal I2C control uses the same Serial Port 0 as the camera control.

See section 3.2.2 for more detail.

For **Write** command, please refer command sheet in section 5.

Let's try 57 00 12 00 00 00 12<send> (or 57-send, 00-send, 12-send, 00-send, 00-send, 00-send, 12-send). You will see a test pattern.

Go back to the default by typing "57 00 12 00 00 00 02" (8-bit linear output for B/W), or "57 00 12 00 00 00 03" (Color Gamma 8-bit). (Fig. 29)

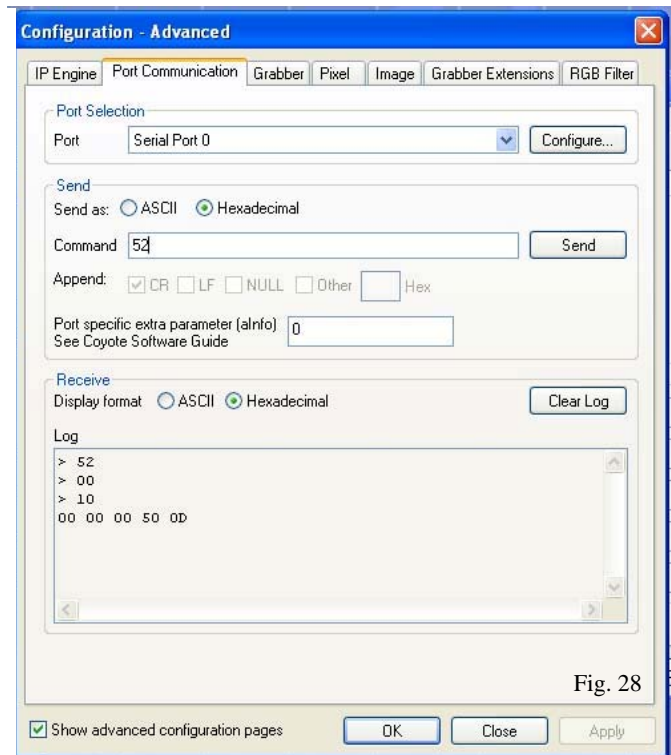


Fig. 28

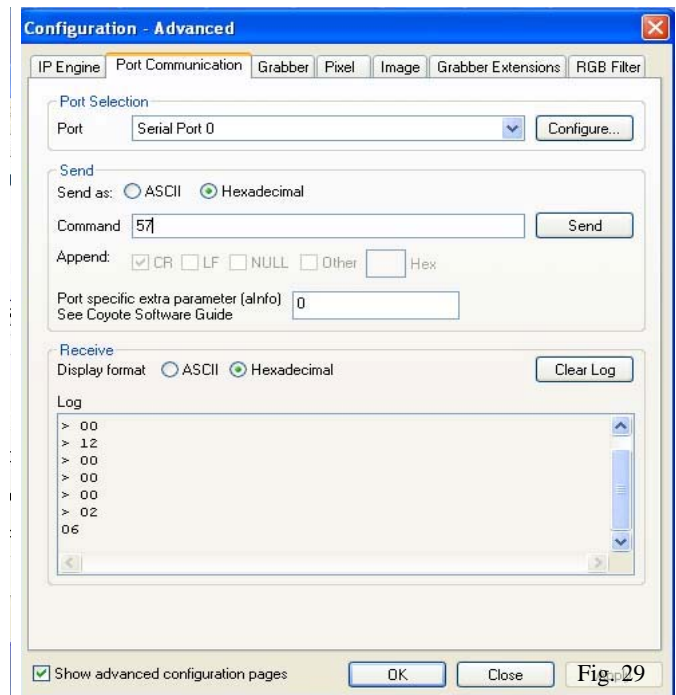


Fig. 29

#### 4.4.4 Color Camera

The difference between monochrome and color camera is the CCD with monochrome or RGB Bayer pattern.

The camera data outputs are the same for both but for the color camera, the PC software interpolation makes the color reproduction into RGB. Go to "Pixel" tab and select "Bayer RGB" in color space. The Color pixel depth is acceptable in only 8-bit for the Coyote Application Software to display. However, the "Raw data" save can be done in 12-bit.

The CCD types and data output formats may require different Bayer pattern starting location. In order to process the proper color interpolation, the "Starting Bayer pattern" order must be selected. Choose one of the starting Bayer patterns from the pull down menu. (Fig. 30)

The Color adjustment can be done by opening "RGB filter" tab. Each R, G, B gain is displayed. By manually adjusting each gain, the best color balance will be set. The current color balance is analyzed by clicking the button. The value is now used to adjust the white balance by applying the value. (Fig. 31)

#### 4.4.5 Save Configuration Parameters to Flash

Once the camera control configuration is completed, the parameter can be stored for the next power up default. It cannot store all data but major parameters. Go to the Coyote Application and pull down the "IP engine" menu. Select "Save device configuration to flash" and mark "Save state to flash".

The default is unmarked and allows the factory default setting at each power-up. Once this is marked, the camera powers up with the new configuration. (Fig. 32 and 33)

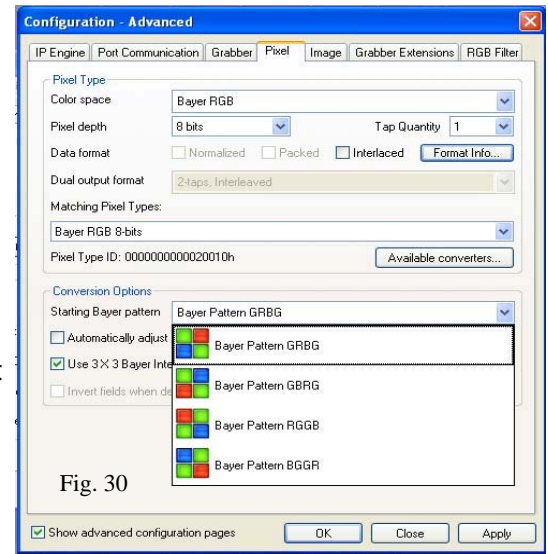


Fig. 30

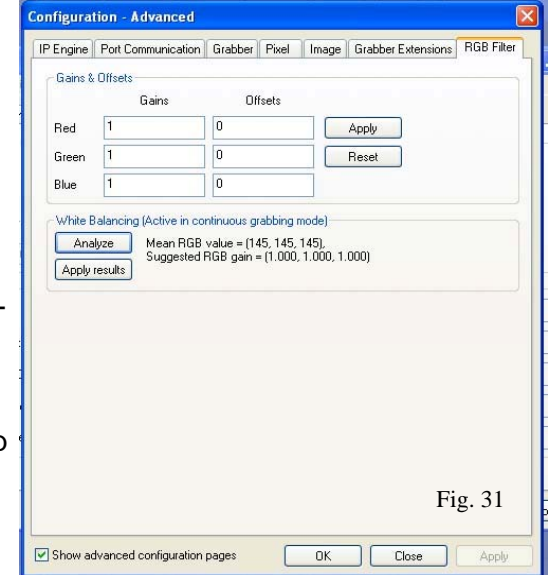


Fig. 31

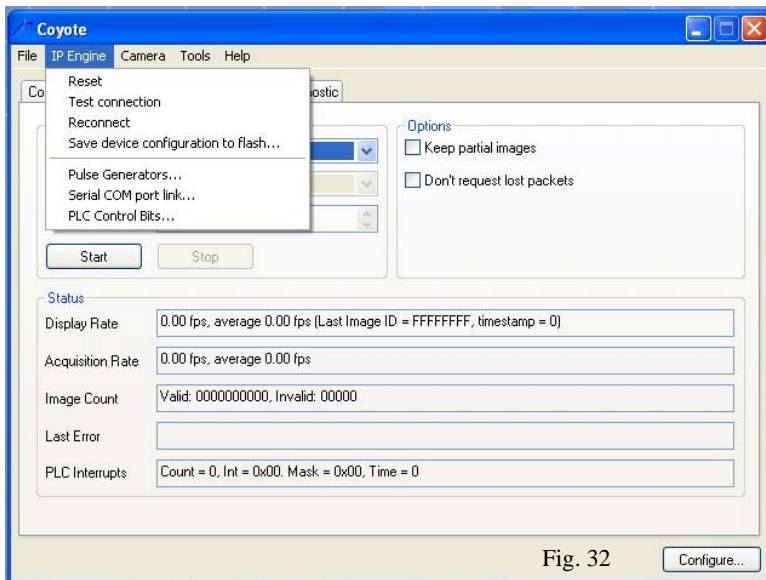


Fig. 32

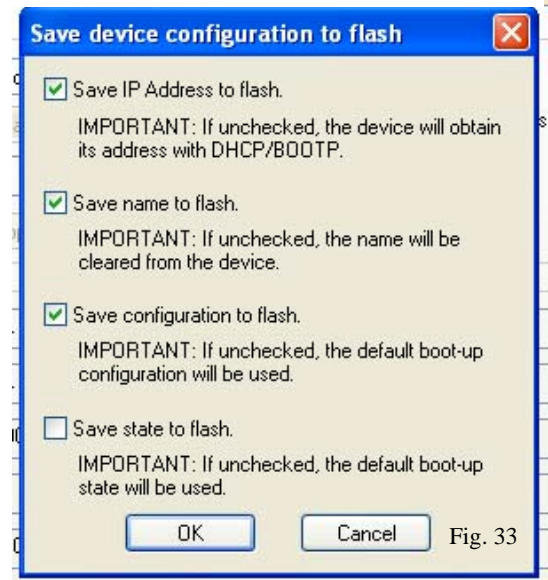


Fig. 33



#### 4.5 Image Capture and Save

The image capture is controlled in the “Acquisition” tab. The typical mode is “Grab Continuous”. Since the camera side only outputs FVAL (Frame Valid) Pulse per trigger, the frame grabber side can stay in continuous mode and only grabs images when it receives FVAL for Async Trigger. The “Acquisition Status” window displays grabbing rate and display rate as well as error detection. (Fig. 34)

The critical functions of the frame grabber are saving the captured images in various formats and controlling the capture timings. Open up the “Image saving” tab. For saving streamed video, use “Continuous”. The saving speed may not be real frame rate due to the storage speed. For most of image processing, images are saved and processed as those are captured. Select “fixed” and choose the “number of images”. If you choose multiple images, the frame number is not necessarily stream video but it is rather controlled by number of triggered frames, which are captured in number of FVAL created by the trigger in Async Mode.

The saving data file format is selectable.

- **Text file with acquired image IDs**
- **Raw data** keeps the same pixel format as selected in “Pixel depth”.
- **Window bitmap** is convenient but limited to 8-bit (or 24-bit color). (Fig. 35).

You can browse the file location to save the images. The default indicates on the desktop and it is convenient to test these functions as you can see the saved images on the desktop each time “Start” button is pressed. You can save the images while the camera is running under continuous mode in “Acquisition” tab.

In Async Mode, you can press the “Start” button then wait for a trigger comes in. Once the specific number of frames are captured with the trigger inputs, the “Start” button recovers to active state (ready to accept next start). When it is saving, the progress bar indicates the activity.

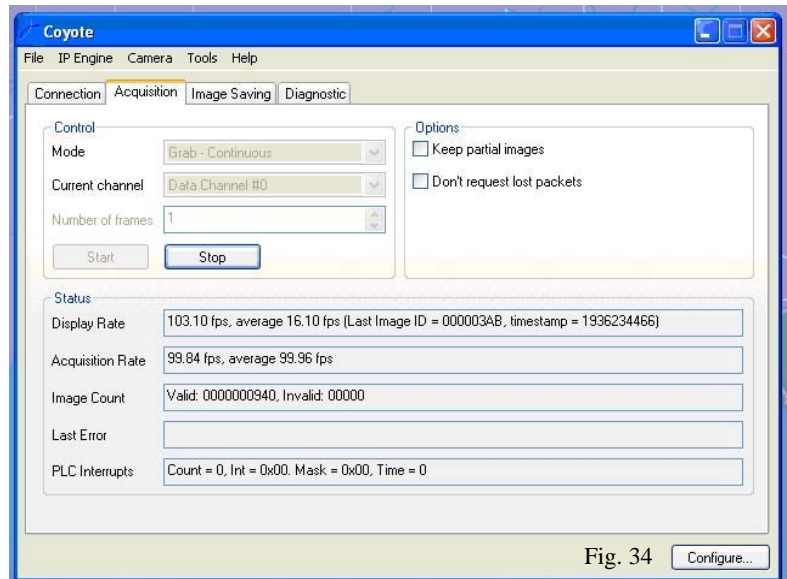


Fig. 34

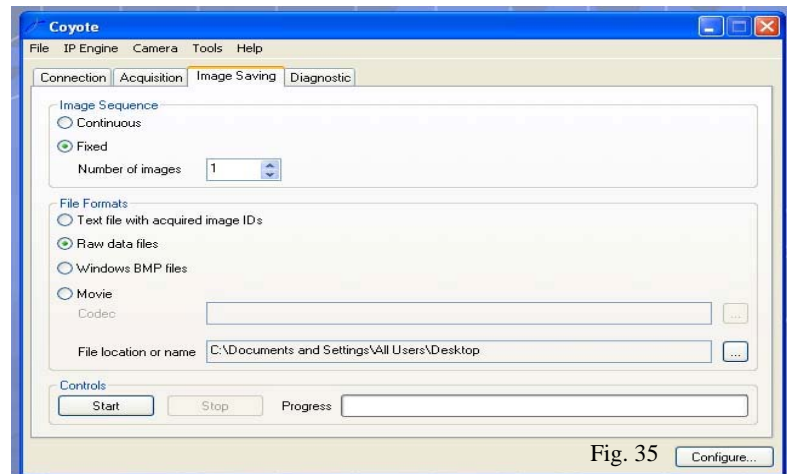


Fig. 35

## 4.6 GPIO (Programmable Logic Controller)

### 4.6.1 Programmable Logic Controller Functions

#### 4.6.1.1 PLC Main Block

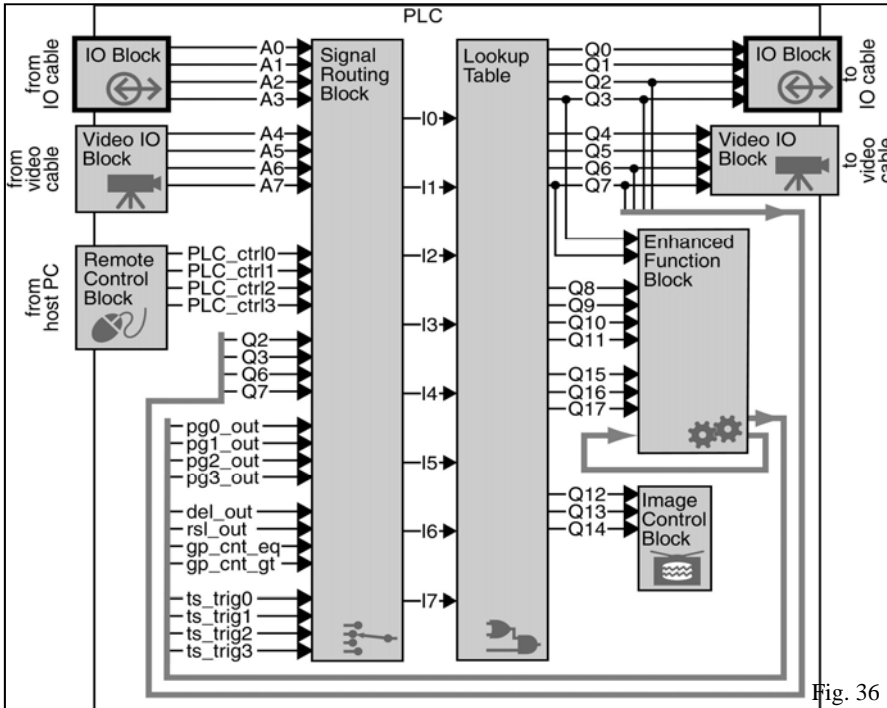


Fig. 36

The Pleora core has a very powerful GPIO control, which replaces simple PLC (Programmable Logic Controller) in factory automation floor. In other words, a GigE camera can replace a camera, a frame grabber and a PLC to save the cost and space.

The PLC function control used in the **GD-series** is well described in the Pleora document.

**Please refer the Pleora PLC reference in the SDK package for detailed information.**

#### Camera GPIO and Core Block:

The GPIO main block is shown in Fig. 36. The upper left IO and Video Blocks are internal connections from the camera module and the upper right IO is connected to the GPIO connector.

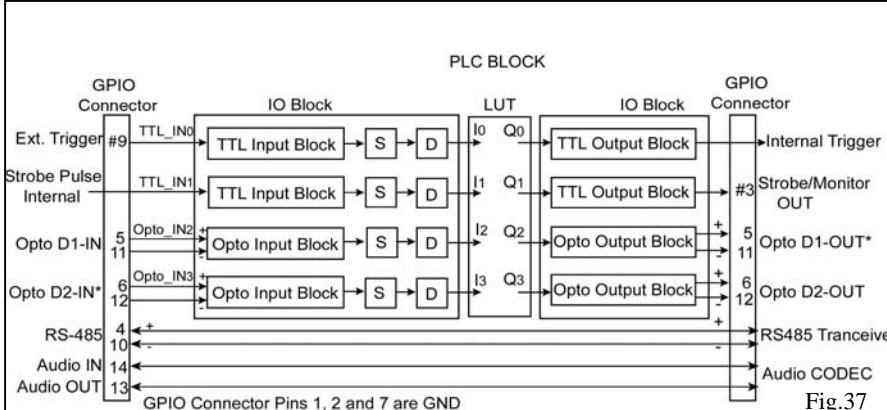


Fig.37

In the **GD-series**, the external IO numbers are limited and the specific signals are two TTL inputs, two opto-isolated inputs, two TTL outputs and two opto-isolated outputs. In terms of PLC IO function, these opto-isolated inputs and outputs are internally converted to TTL. Therefore, regardless the IO function, all interface inside of the PLC block is the TTL logic level. (Fig. 37).

The LUT Block connects each Input Block and Output Block.

The Enhance Function Block outputs

are looped to both input and output blocks.

#### GPIO Inputs (4 inputs):

The External TTL trigger input is connected to TTL\_IN0 and I0 via the GPIO connector, Pin #9.

The Strobe-out from the camera module is connected directly to TTL\_IN1 and I1.

The Opto-D1 (Pins #5 & 11) inputs are connected to Opto\_IN2 and I2.

The Opto-D2 inputs (Pins #6 & 12) are connected to Opto\_IN3 and I3. (\*D2 is normally set to output and the jumper setting has to be changed for the input mode).

#### GPIO Outputs (4 outputs):


Internal Trigger (directly to camera module) is TTL\_OUT0 and Q0.

The GPIO connector, Pin #3 is TTL\_OUT1 and Q1. It can be used as signal monitoring of internal pulses or status by selecting LUT (factory default is Strobe Out).

Opto-D1 output is Opto\_OUT2 and Q2.

Opto-D2 output is Opto\_OUT3 and Q3. (\*If Opto-D1\_OUT is selected, the hardware jumper must be changed. Opto-D2\_OUT is default ).

#### 4.6.1.2 Configuring PLC Functions

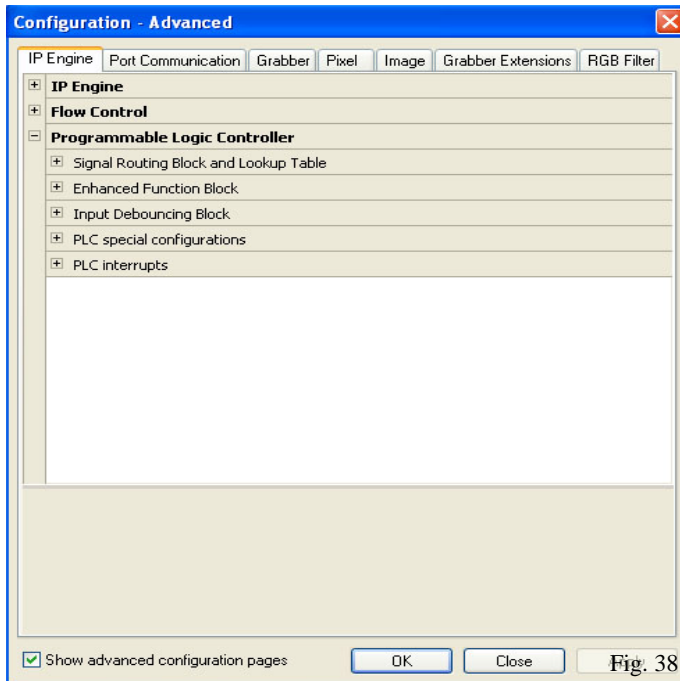

In order to configure the PLC (GPIO) functions, let's start the **GD-series** operation at first. Open the Coyote Application and click "Configure". The PLC configuration is in the "IP Engine" tab. With the advanced configuration marked, there are 5 segments of PLC configuration blocks. (Fig. 38) In this manual, we will go through Signal Routing Block, Lookup Table (LUT), and Enhanced Function Block".

#### 4.6.1.3 Signal Routing Block



This defines the input node to each input signal from I0 to I3. The I0 is External Trigger Input for the camera (default). If the internal software trigger is required, you can choose Pulse Generator 0 output or GPIO Control Bit 0 for the I0. The selection of these functions is shown in Fig. 39. For Opto-isolated inputs, this section is also TTL level after signal conversion in previous blocks. For the practice, let's select "Pulse Generator 0" and click "Apply".

#### 4.6.1.4 LUT

The Lookup Table connects each Input and Output including programming of the functionalities. In this section, we are using simple connections between IOs. To connect I0 to the specific output of TTL\_OUT 0 for the trigger function, type "Q0=I0" in LUT section. In Fig. 40, I0 is TTL Input 0 and Q0=I0. This allows the External Trigger to go through PLC, and output the Internal Trigger directly to the camera module. You now choose "Pulse Generator 0" and the Internal Trigger is now connected to the Pulse Generator 0. Click "apply".

To see the changes of camera behavior, you have to go to the "Port Communication" tab and change the mode to Async.

Let's select the Pulse-width Control. Type "57 00 23 00 00 00 02" <send>. Without the external trigger or the internal software trigger, the image may freeze and wait for the trigger.

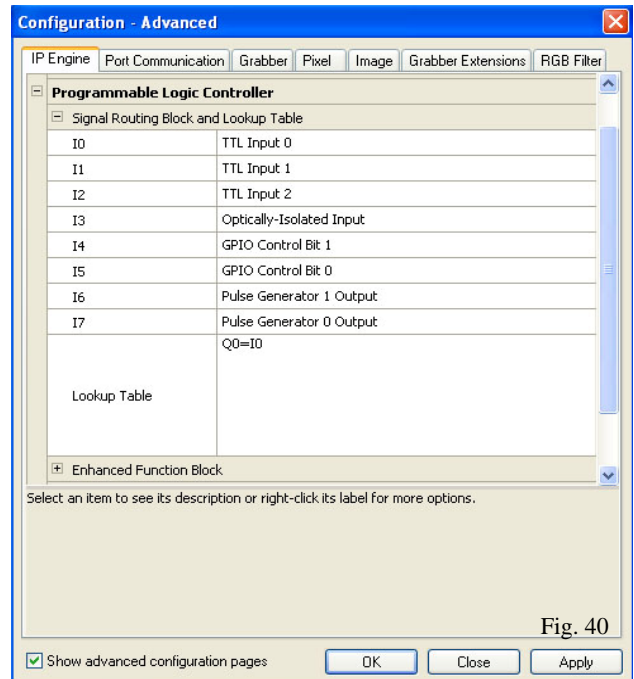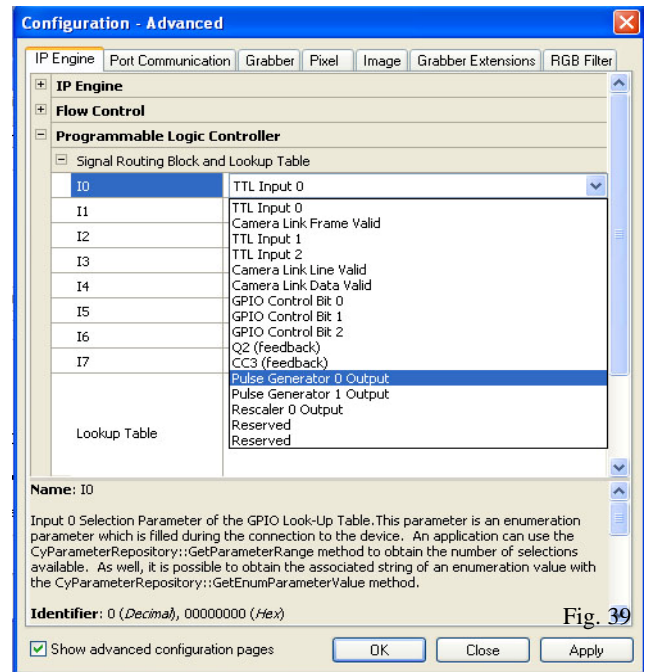

#### 4.6.1.5 Programming Pulse Generator

You have two ways to program the Pulse Generator. You can go to;

- **Enhanced Function Block**

One method is to program Pulse Generator #0. Internal Trigger needs the falling edge trigger and make sure the Trigger mode is "Falling edge". (Fig. 41)

The Granularity is multiple (n+1) of 30 ns. So, in the case of Fig. 41, the duration of high is  $16502 \times 101 \times 0.03 \mu s = 50,000 = 50 \text{ ms}$ . The low, which decides the pulse width for Pulse-width Control is  $1651 \times 101 \times 0.03 = 5 \text{ ms} = 1/200 \text{ s}$ . The "Periodic Pulse" is marked to create continuous pulses.

The other method is to go to Coyote Application.

- **IP Engine Pull-down Menu**

You will see "Pulse Generators..." and "PLC Control Bits...". These are useful tools to control the popular PLC functions. (Fig. 42)

Select "Pulse Generators". You will see a GUI (Graphic User Interface) with slide bars (Fig. 43). "Pulse Generator #0" is shown in the selection window. The pulse durations are also visible and the values are the same as you set in Enhanced Function Block. The values can be overwritten by moving these slide bars. It also shows total duration times in ns. Try moving "Width" bar.

The images in display change the brightness if you have set the camera control mode to Async Pulse-width mode (57 00 23 00 00 00 02). If you monitor GPIO Pin #3, Strobe Output, you can see the camera is responding to the internal pulse generator trigger. In the LUT, you have to connect the Internal Strobe Pulse to the GPIO Pin #3 by typing Q1=I1 (default). If you want to monitor the Pulse Generator 0 output, you can use the pin 3 by selecting LUT Q1=I0 where I0 is connected to Pulse Generator 0.

Note: The Pulse Generator output is kept low if there is no output command such as Periodic output or PLC Control Bit. Therefore, the normal falling edge trigger pulse, which is similar to the External Trigger (TTL) cannot be generated. In the case, you can go to "Camera Port Communication" and select "Trigger Input Polarity Change". Type 57 00 21 00 00 00 01 <send>. This will allow the trigger input mode from low to high (rising edge trigger). Swap the values of delay (low duration) and width (high duration) to control the pulse-width.

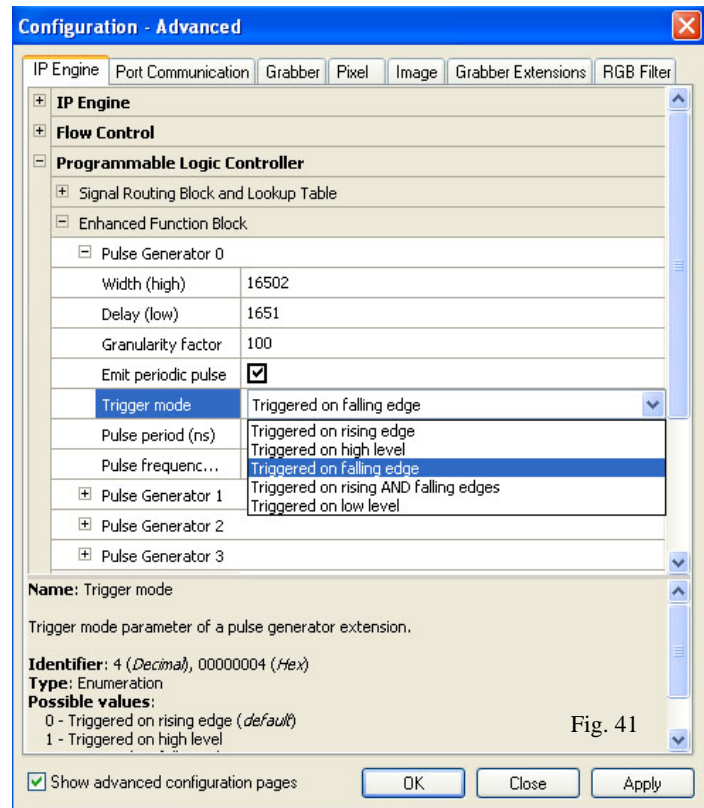


Fig. 41

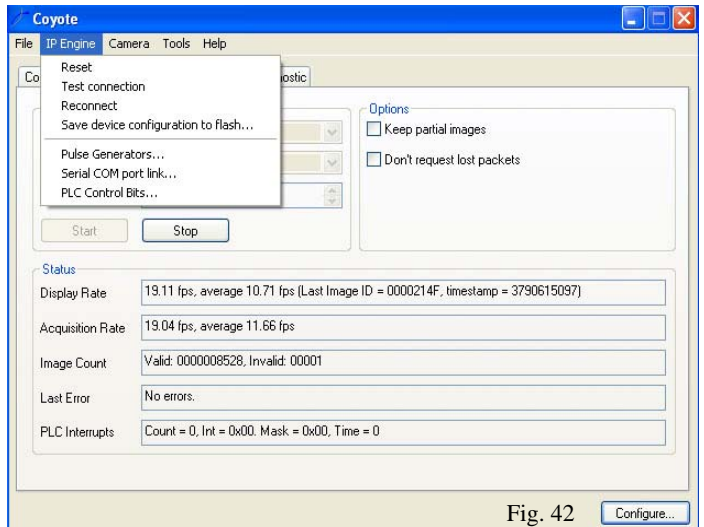


Fig. 42

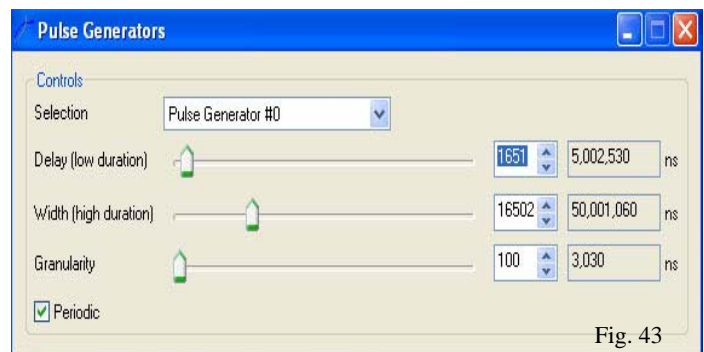


Fig. 43



#### 4.6.1.6 Enhanced Function Block Connections

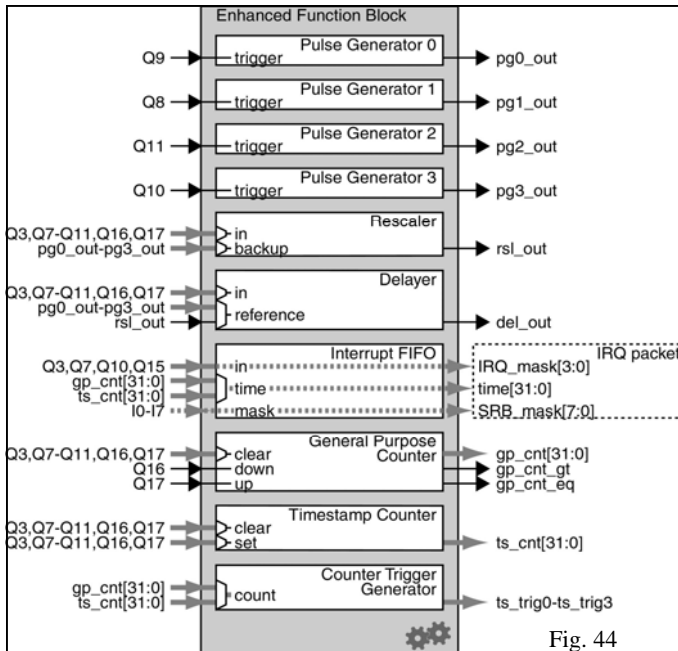


Fig. 44

The Inputs and outputs of the Enhanced Function Block are fixed as shown in Fig. 44.

If you are feeding a signal into Pulse Generator 0, the output must go to Q9. For example, I1 with PLC Control Bit 0 is connected to the Pulse Generator 0, then the LUT is Q9=I1.

**The brief summary of the Enhanced Function Block:**

- **Pulse Generator:** Create a pulse.
- **Rescaler:** Adjust the frequency of an input signal.
- **Delayer:** Delay a complex signal.
- **Interrupt FIFO:** Send an interrupt request to PC.
- **General Purpose counter:** Count pulses such as from the encoder on a conveyer belt.
- **Timestamp Counter:** Use IP Engine's on-board clock.
- **Counter Trigger Generator:** Set "alarm clock that outputs up to four signals.

#### 4.6.1.7 Programming PLC Control Bit

The PLC Control Bit function allows manual control of your circuit via the Remote Control Block from PC.

In "IP Engine" pull-down menu, select "PLC Control Bits...". The "PLC Control Bits" dialog box appears. (Fig. 45)

Firstly, you have to change the I/O signal routing. Go to "Configure" and open the "IP Engine" tab. In "Signal Routing Block", select I/O with "GPIO Control Bit 0". Now the PLC input signal is connected to the remote control 0. Also set the PLC\_CTRL 0 to True. Click "Apply" or "OK" and close the configuration dialog.

Coyote Application PLC Control Bit is now active and PLC\_CTRL 0 is set for Q0 output (connected to the Internal Trigger). In the pane of "Set value", it gives the state of the signal. The unmarked state is logic "Low (=0)" and the marked state is logic "High (=1)". If the camera is already configured for Async reset mode, each time the Bit Control state changes from high to low, it will reset.

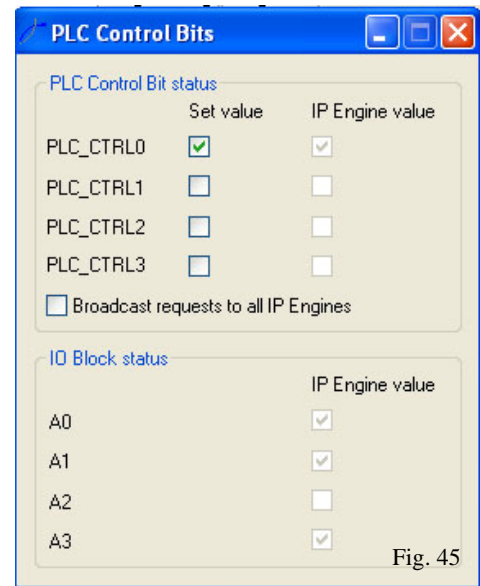


Fig. 45

#### • Triggered Single Pulse Generator using PLC Control Bit:

This allows single pulse programmed by the Pulse Generator and triggered by the manual remote control.

Let's practice to create a single pulse trigger control with Pulse-width control mode.

We will use the same pulse duration as shown in previous page (50 ms for High and 5 ms for Low).

However, the Pulse Generator outputs the rising edge trigger only with PLC\_CTRL. Therefore, the camera must accept the rising edge trigger pulses. To change the trigger polarity, go to "Port Communication" and type 57 00 21 00 00 00 01<send>. ( Rising Edge Trigger)

In the same Port Communication, select Pulse-width control mode by typing "57 00 23 00 00 00 02".

For the normal async triggering, this polarity change is not necessary.

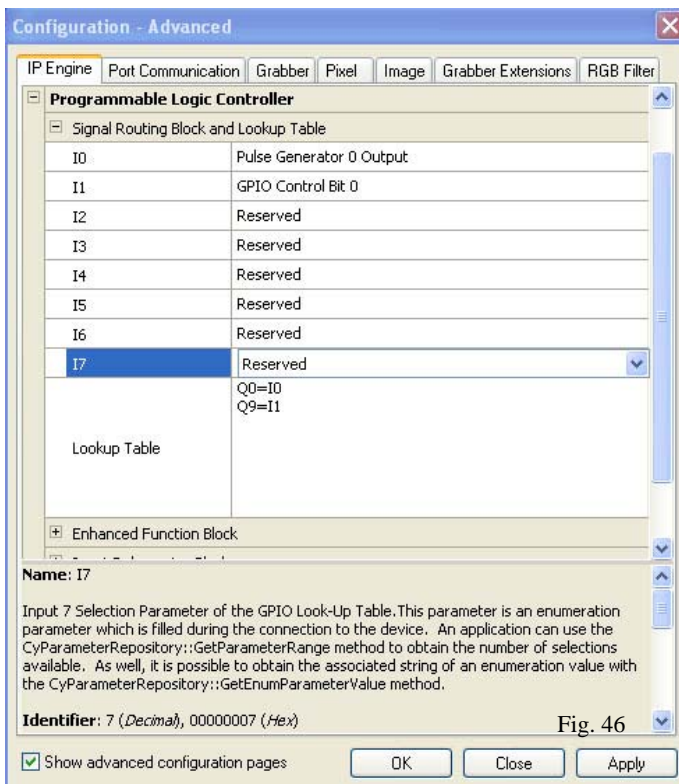


Fig. 46

- **Single Pulse Trigger with Pulse-width Control:**  
Open the "IP Engine" tab and select "Signal Routing Block and Lookup Table". (Fig. 46)

Choose;

I0: Pulse Generator 0

I1: PLC Control Bit 0.

In the LUT, type Q0=I0, Q9=I1.

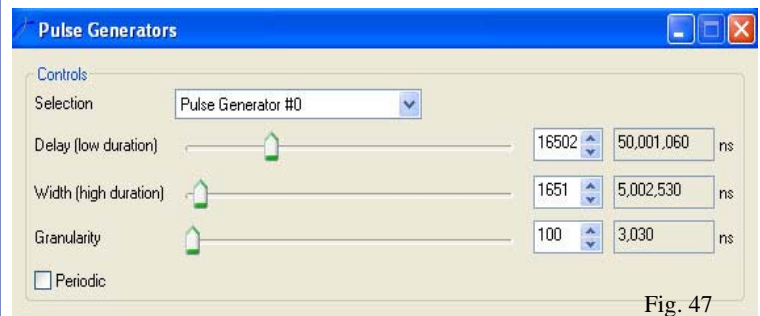


Fig. 47

Open the Coyote "IP Engine" and "Pulse Generators". Mark for the "Periodic" pane to allow continuous trigger at first (Fig. 47). Observe the image capturing in Coyote Acquisition. You will see the continuous image, of which brightness changes when you move in the Width (high duration) bar.

Next, mark off for the "Periodic" pane to allow single triggering.

Open "PLC Control Bits" dialog from the "IP Engine" menu. Keep both "Pulse Generator" and "PLC control Bits" dialogs open.

"PLC\_CTRL0" is now active and "Set value" can create the single shot trigger with programmed value. Click the Set value pane for on/off (Fig. 48). You will see single shot images each time it is activated.

When you move in the "Width" slide bar of "Pulse Generators" dialog, each image displayed will change the brightness.


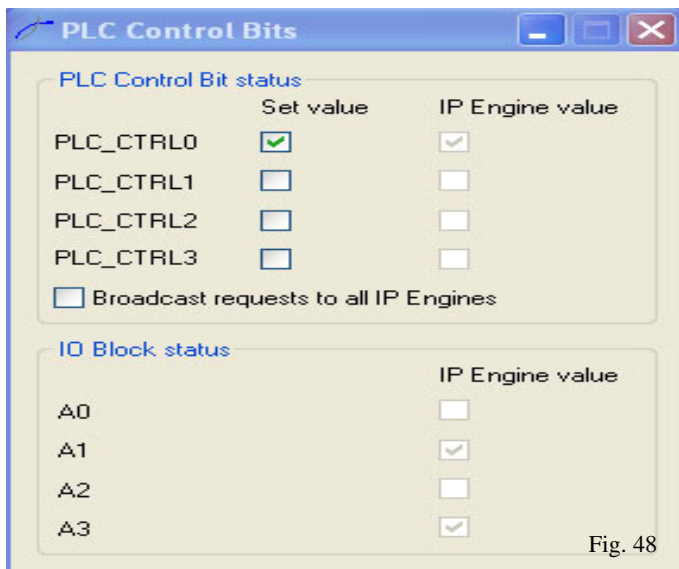


Fig. 48

• Including Delayer:

We can add delays into the trigger pulse after sending Set value command (Fig. 49). Let's describe the PLC signal pass.

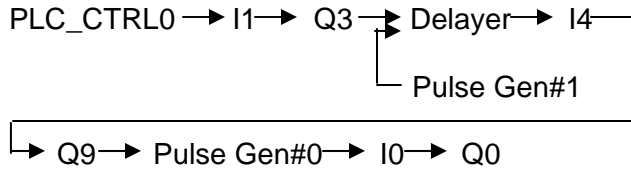

For Signal Routing Block (Fig. 50)

I0: Pulse Generator 0 Output  
I1: PLC Control Bit 0  
I4: Delayer 0 Output

Delayer 0 (Fig. 51)

Delay count: 30 (60 ms x 30 = 1.8 s)  
Input signal: Q3  
Reference timing: Pulse Generator 1 output

Pulse Generator 0

Same as Fig. 47

Pulse Generator 1 (Fig. 51 & 52)

Width: 1024 (30 ms)  
Delay: 1024 (30 ms)  
Granularity: 1000 (30μs)  
Periodic : Yes (marked)

Lookup Table (Fig. 50)

Q0=I0  
Q3=I1  
Q9=I4

In this practice, you will see the delayed pulse by roughly 2 seconds generated after you click "PLC\_CTRL0" pane. By changing Width bar at "Pulse Generator #0", you will see the brightness changes and by changing the values of "Pulse Generator #1", you will see the delay period varies.

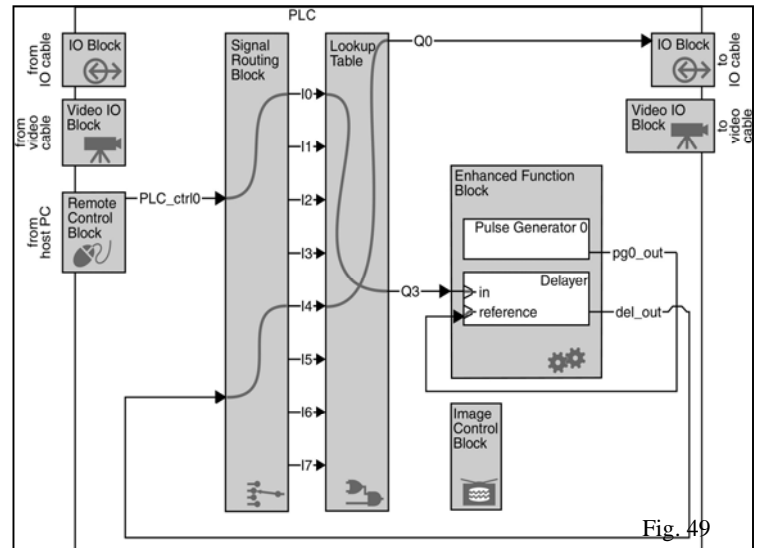


Fig. 49

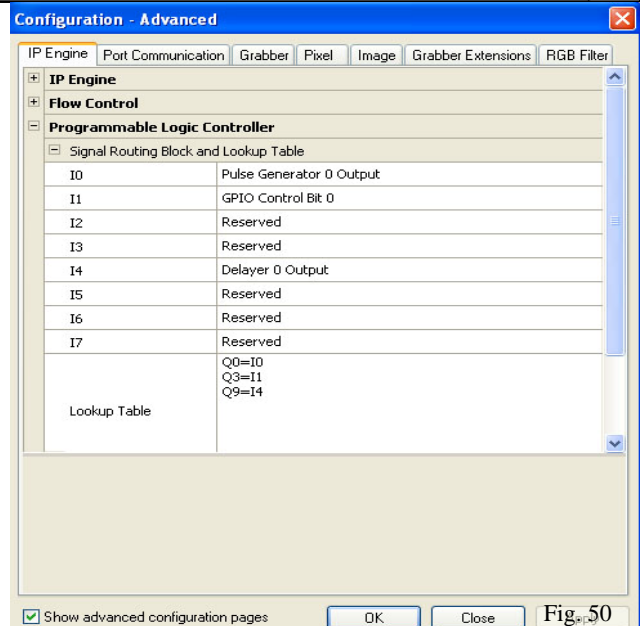


Fig. 50

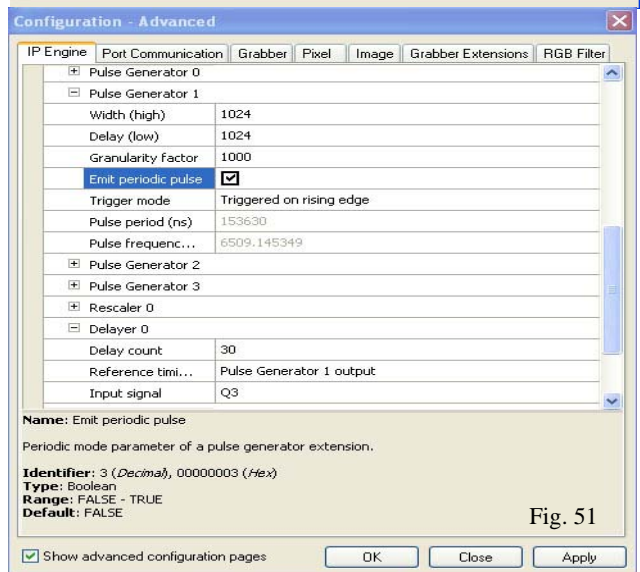


Fig. 51



Fig. 52



#### 4.6.1.8 Other Programmable Logic Controller Functions

There are many useful tools for PLC in the real world factory automation. The **GD-series'** default has one input and one output opto-isolators. These IOs can be used for the trigger input instead of TTL in noisy environment, and the output can be used for an ejector after counting number of triggers (use General Purpose Counter). The input can be used for an encoder. The input and the output can be variable delayed (sequencer) signals.

Signal Debouncing Block can hold the input signal for 480 ns to 31 ms, which eliminates noisy input error such as chattering and induction noise.

Let's try the Opto-isolator IOs to replace TTL trigger input and Strobe output.

LUT                      Q0=I2 (I2 is connected to Opto D1\_IN)  
                               Q3=I1 (I1 is Strobe out from the camera module)

Please note that Opto-isolator output is open-collector output and you need an external resistor between the collector and Vcc to operate. See 4.6.3.

The LUT accepts complex Boolean expressions such as AND (&), OR (|), XOR(^), NOT (!) operations to combine various inputs.

Example: Q1=I5&I3, Q16=I8|I6, Q6=!(I4&I6)&((I2^I5)|I1)

#### 4.6.2 GPIO Connector and Cables

The GPIO interface is MDR-14pin connector, which is small but very robust for industrial use.

The **Pin Assignment** is described below;

1	12V RTN (GND)	8	Power in 12V
2	GND	9	Trigger in (TTL)
3	Strobe out	10	RS-485 -
4	RS-485 +	11	Opto D1 in -
5	Opto D1 in +	12	Opto D2 out -
6	Opto D2 out +	13	Audio out
7	GND	14	Audio in



Fig. 53

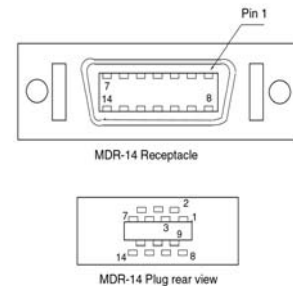


Fig. 54

Full functional GPIO cables are available from Intercon1 ([www.nortechsys.com/intercon](http://www.nortechsys.com/intercon)) with various length. The mating MDR-14 Plug is commonly available from various 3M distributors. The part number for solder cup model is 10114-3000PE (Made by 3M).

Industrial RJ-45 cables are also available from Intercon1 and other cable manufacturers. See 2.1.2.

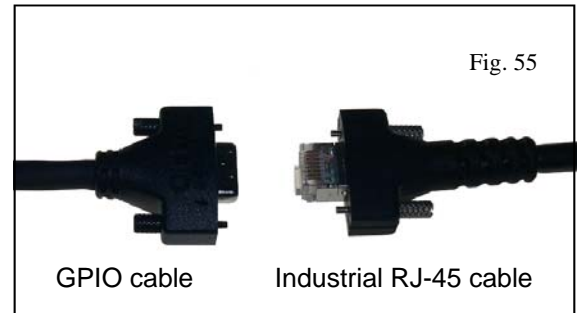


Fig. 55

#### GPIO Full-function Cable and Pin Assignment

A: Orange core = Pin 9	A: White core = Pin 3
Shield = Pin 2	Shield = Pin 2
A: Violet core = Pin 13	A: Yellow core = Pin 14
Shield = Pin 7	Shield = Pin 7
B: Red = Pin 8 (12V)	B: Black = Pin 1 (RTN)
D: D1 = Pin 4	D2 = Pin 10
D3 = Pin 5	D4 = Pin 11
D5 = Pin 6	D6 = Pin 12
D7 & 8 Spare	

A: Shield wire  
 B: Normal wire,  
 D: Twisted pairs (1&2, 3&4, 5&6)

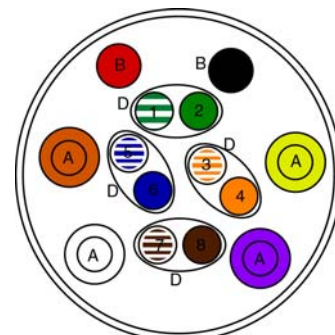


Fig. 56

### 4.6.3 GPIO Input and Output

- TTL Input and Output**

The Trigger Input and Strobe/Exposure Control Pulse Out are TTL input and output. The simplified input and output circuits are shown in Fig. 57.

It is a typical high-speed inverter-buffer IO and the sink current is not high (24 mA). Therefore, a care must be taken for these interface ratings. Although the internal logic has ability to reject the induced noise but TTL is high impedance in general and avoiding the noise into the interface is a good practice. We suggest using full functional cables which have multiple individually shielded cables to meet the noisy environment applications.

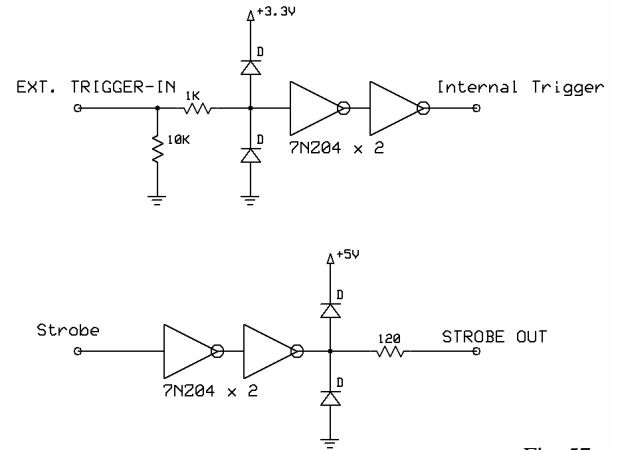


Fig. 57

- Opto-isolated IO**

We use a quad opto-isolator and a set of input/output, two sets of input or two sets of output are selectable with solder jumpers.

A full function GPIO cable has four twisted pair of cables. Opto-isolated IO connects to each differential pair IOs. User can select the following pairs;

- 1 D1 Input, D2 Output (Default)
- 2 D1 Input, D2 Input
- 3 D1 Output, D2 Output
- 4 D1 Output, D2 Input (Fig. 58)

Hardware jumper change besides software selection is required. See 3.4.2.

The Maximum rating of LED  $I_F$  is 50 mA and the minimum current to turn the transistor ON is 3 mA. This allows the overall input voltage range of 3.0V to 50V. (We recommend to stay up to 28V DC).

Output is open collector. Photo-transistor rating is  $V_{CEO} = 80V$  and the maximum current is 50 mA. Operating temperature range is  $-55$  to  $100^\circ C$ . The collector resistor,  $R_c$  is decided to achieve 3mA to 5mA of  $I_c$  at the operating voltage ( $V_{cc}$ ). (For  $V_{cc} = 24V$ ,  $R_c = 24V/5mA = 4.8$  (or  $4.7$ )K $\Omega$ .) The isolation resistance is  $10^{14} \Omega$  and the isolation voltage is 5000V DC and 2500V AC. For the detail of opto-isolator, please refer TLP281.

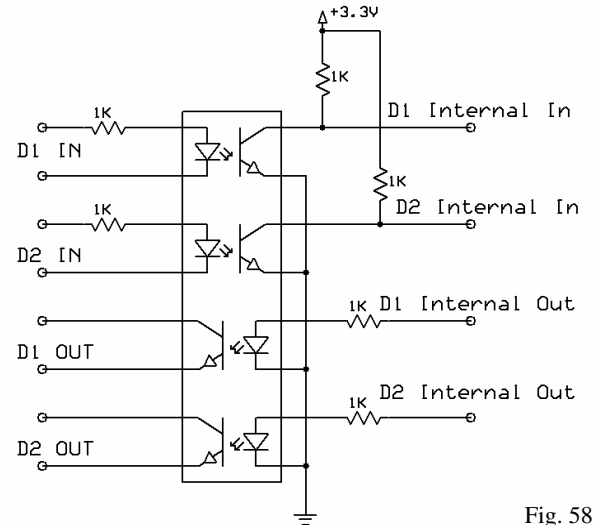


Fig. 58

- RS-485**

The RS-485 is twisted pair serial communication standard, which can run over 1000 feet. We use ISL81486 ultra high speed RS-485 transceiver, which is compatible with PROFIBUS. The speed can go 30 Mbps. The termination resistance between the differential IOs is 120 $\Omega$ .

- CAN Device**

By replacing the RS-485 IC, CAN device is available. The device is SN65HVD251. The device can be used in CAN, DeviceNet or SDS applications.

- Audio CODEC**

The audio codec uses AD74111, monaural digital audio IC.

For the specific CODEC characteristics, please refer the AD74111 data sheet.

## 5. Camera Control Command and Register Map

<Control Registers Address and Data>			Table 3
Register Name	Address	Data	
	(L-CH) (R-CH)		
ChannelBalance	0x00 02	00 00 00 01	Auto-balance Enable, 00 00 00 00 Disable
GainErrorFactor	0x00 03	00 00 00 00 to 00 00 00 FF	(Max 3FF)
GainRaw	0x00 10	00 00 00 00 to 00 00 03 FF	default = 00 00 00 50
BlackLevelRaw	0x00 11, 0x00 19	00 00 00 00 to 00 00 00 FF	default = 00 00 00 48
PixelFormat	0x00 12	00 00 00 00	12-bit
		00 00 00 01	10-bit
		00 00 00 02	8-bit default for monochrome
		00 00 00 03	8-bit with LUT (Gamma 0.45) default for color
		00 00 00 13	Test pattern 8-bit
		00 00 00 20	16-bit with 12-bit MSB data
TriggerMode	0x00 21	00 00 00 00	Falling edge trigger
		00 00 00 01	Rising edge trigger
AcquisitionMode	0x00 23	00 00 00 00	Continuous, Normal
		00 00 00 01	Async trigger
		00 00 00 02	Async Pulse-width control
		00 00 00 03	Strobe enable (Back-to-back)
		00 00 00 04	ITS multi-frame capture with different exposure, Continuous video
		00 00 00 10, 20	Partial scan Normal
		00 00 00 11, 21	Partial scan Async trigger
		00 00 00 12, 22	Partial scan Pulse-width control
		00 00 00 14, 24	Partial scan ITS multi-frame capture
Exposure control	0x00 24	00 00 00 00	No-shutter (default exposure)
		00 00 00 01 to 32-bit	Count by 1H.
		Dual tap VGA: 1H = 10 $\mu$ s (1/100,000 sec), >100,000H (000186A0)=1s	
		Dual tap 5M: 1H = 40 $\mu$ s (1/25,000 sec), >50,000H (0000C350)=2s	
Back-to-back strobe position	0x00 25	00 00 00 04 to one frame in 1H increment	
Partial scan starting lines	0x00 26	00 00 00 00 to 00 00 00 FE	(VGA:240 active lines)
		00 00 00 00 to 00 00 01 7B	(XGA: 400 active lines)
		00 00 00 00 to 00 00 01 40	(SXGA: 720 active lines)
ITS mode frame capture number	0x00 29	00 00 00 00	Single frame capture (default)
		00 00 00 02	Two frames
		00 00 00 03	Three frames
	0x00 27	same as 0024 but apply to exposure control to second frame	
	0x00 28	same as 0024 but apply to exposure control to third frame	
FPGA Date and Rev	0x00 FF	Date code (Read only)	
I2C Cotnrol	0x90 00	Temperature (Read only)	
Factory Default	0xFF FF	00 00 00 00	Recall factory default
Power-up Default	0xFF FE	00 00 00 01	Save current settings for user power up default. (Registers: 0010, 0011, 0012, 0023, 0024)

## 6. SDK (Software Development Kit)

Standard SDK is written in Visual C++ in a Visual Studio 6.0 environment. Pleora offers various SDKs for its drivers and engines which include Visual Basic, Linux, and third party drivers such as MIL, NI, Halcon, Image Pro.

All GEViCAM controls are done by register base control and just need serial communication port to access to the registers (Similar to RS-232 control via GigE port).

GigE Vision standard requires general compatibility but doesn't cover various functions that GEViCAM features. The SDK covers GigE Vision standard compliant version for general purpose. However, the proprietary high performance version may be better suit for OEM applications. Due to the powerful functions of GEViCAM cameras, we suggest to use Pleora iPort SDK 2.3.1 for the best performance.

### 6.1 iPort SDK Related Documents

Please review following documents in the software package;

- SDK reference guide
- PLC reference guide
- iPort Software Coyote
- Introduction IP Engine
- E-Bus Introduction Quick Start (e-Bus file)
- iPort Instruction Quick Start
- What's New in Version 2.3.1

### 6.2 Field Upgrade

GEViCAM cameras are designed to download the firmware via Ethernet without removing the camera from the installed location. This allows easy future upgrade or change to the SDK versions (Proprietary or GigE Vision) in the field.

#### Upgrading Firmware:

Use the Pleora upgrade tool. This FPGA update software is not included in the Pleora SDK. Please contact GEViCAM for this software. ***It may require user qualification to obtain the software.***

- (1) UnZip FPGA\_UPDATE file and execute "Updater". Create a UPDATE file folder and save these unzipped files.
- (2) Make sure to create two folders and name as "Main" and "Backup". These must be in the same folder as FPGA\_Update programs.
- (3) Copy (drag from email attachment) "gevicam.rbf" file to both main and backup folders. If you have older files, rename them prior to copying the new update.
- (4) Power up the GEViCAM camera with current program and make sure the camera is connected to the PC through Ethernet. Open Coyote Launcher application and setup the communication as usual.
- (5) Execute FPGA\_Update. Besides DOS prompt, it will ask the device driver. Click "OK" on High performance driver. The device detection must be completed and connected.
- (6) It starts updating Image 1. Click "OK" when it is finished.
- (7) Then it programs Image 0 as backup. Click "OK" when it is finished.
- (8) Update is completed. Turn off the camera and close Coyote.
- (9) Restart the camera and open Coyote. New firmware will be working.

## 7. Troubleshooting

GEViCAM troubleshooting is almost the same process as the standard iPort Engine troubleshooting of Pleora document. Please refer version 2.3.1 SDK document. The brief contents of the troubleshooting are listed in section 9.7.

## 8. Specifications

### 8.1 Electrical Specifications

# Preliminary

	GD-155000	GD-3400 (TBD)	GD-21000 (TBD)	
CCD Imager	2/3" 5-Meg	1/3" VGA	1/2" 1-Meg	
Active Pixels (data out)	2456 x 2058	640 x 480	1024 x 1024	
Pixel Size (μm)	3.45 x 3.45	7.4 x 7.4	5.5 x 5.5	
Active Area (mm)	8.74 (H) x 7.13 (V)	4.74 (H) x 3.55 (V)	5.63 (H) x 5.63 (V)	
Scanning Mode	Progressive scan full	Progressive scan full	Progressive scan full	
Frame Rate	12 fps @40 x2 MHz	200 fps @40 x2 MHz	60 fps @40 x2 MHz	
Data Clock	80 MHz	80 MHz	80 MHz	
Data Output	Gigabit Ethernet	Gigabit Ethernet	Gigabit Ethernet	
Resolution	2456 x 2058	640 x 480	1024 x 1024	
S/N Ratio	>56 dB	>58 dB	>58 dB	
Minimum Illumination	0.5 lux at 12 fps	2.0 lux at 200 fps	1.0 lux at 60 fps	
Gamma	1.0 / 0.45 LUT	1.0 / 0.45 LUT	1.0 / 0.45 LUT	
Power Requirement	12 V DC ±10%, 5W	12 V DC ±10%, 4W	12 V DC ±10%, 5W	
Lens Mount	C-mount	C-mount or CS	C-mount or CS	
Operating Temperature	-10°C to +50°C	-10°C to +50°C	-10°C to +50°C	
Vibration	7G	7G	7G	
Shock	70G	70G	70G	
Size (mm)	34 x 34 x 68	34 x 34 x 68	34 x 34 x 68	
Weight	115g (4oz)	115g (4oz)	115g (4oz)	

Table 4

### 8.2 Power consumption and Thermal considerations

GD-155000 has powerful functions and high speed dual-tap GigE architecture in a very small package. The power consumption is less than 5 W at 12V. However, heat generation is inevitable for such high speed device. The camera design contains heat pipe structure for two critical components, FPGA and PHY to extract the junction temperature to the base plate. CCD generates more heat than other small CCDs and thermally connected to the front end. Even though internal components are kept the junction temperature at reasonable range, package may get hot. It is recommended to mount cameras on relatively large metal mounting stages (brackets).

### 8.3 Mechanical (Unit: mm)

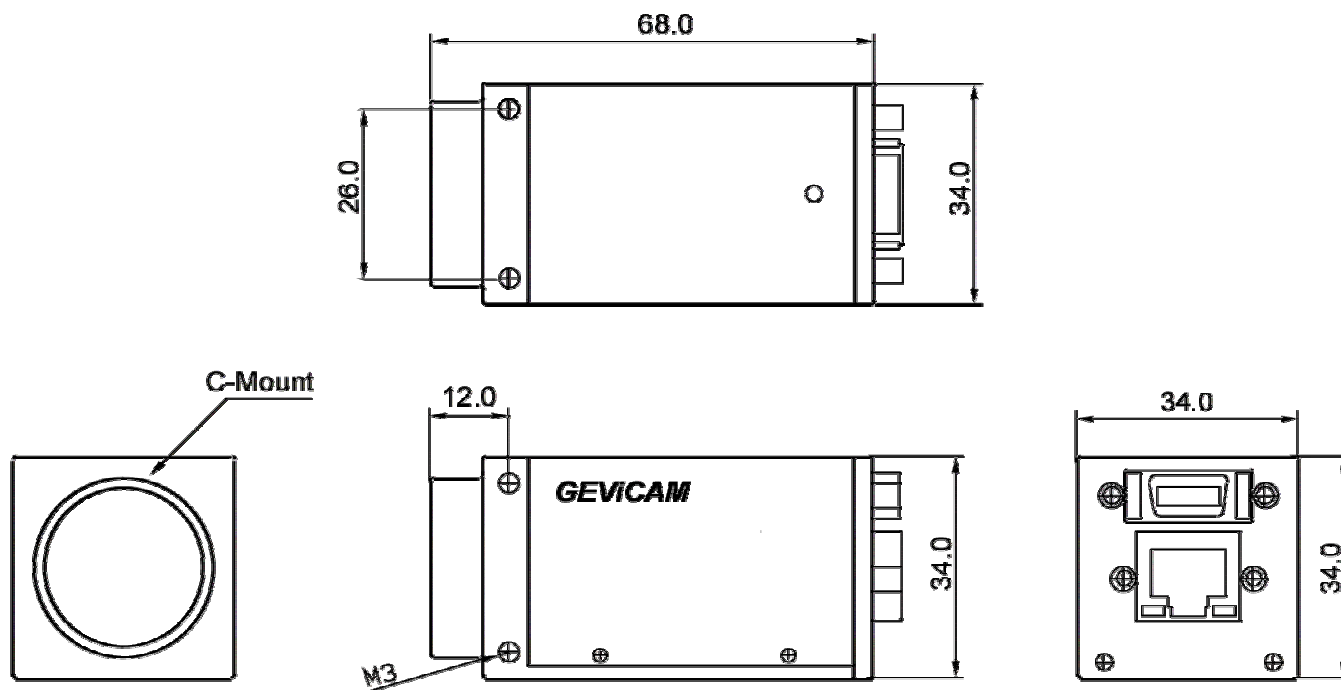


Fig. 59

#### <GPIO Connector Pin Assignment>

- |                 |                    |
|-----------------|--------------------|
| 1 12V RTN (GND) | 8 Power in 12V     |
| 2 GND           | 9 Trigger in (TTL) |
| 3 Strobe out    | 10 RS-485 -        |
| 4 RS-485 +      | 11 Opto D1 in -    |
| 5 Opto D1 in +  | 12 Opto D2 out -   |
| 6 Opto D2 out + | 13 Audio out       |
| 7 GND           | 14 Audio in        |



## 9. Pleora Document Lists

The documents listed here are included in the Pleora SDK software ver. 2.3.0. These are helpful tools to supplement this manual. When you unzip and install the SDK software, it contains a documentation file among other Pleora Technologies files in the Program file of your computer. Look for iPort and E-Bus documentation files. You will see files shown in Fig.60. We suggest to keep several important documents for your reference. They are;

1. iPort Software Coyote
2. Introduction IP Engine
3. E-Bus Introduction Quick Start (e-Bus file)
4. iPort Instruction Quick Start
5. What's New
6. Reference. PLC
7. Troubleshooting Guide

The SDK reference manual is provided in two forms. Visual Studio 6.0 base (Visual C++), and Visual Basic base. We suggest to keep Visual C++ version as it is the most recent document and improved version.

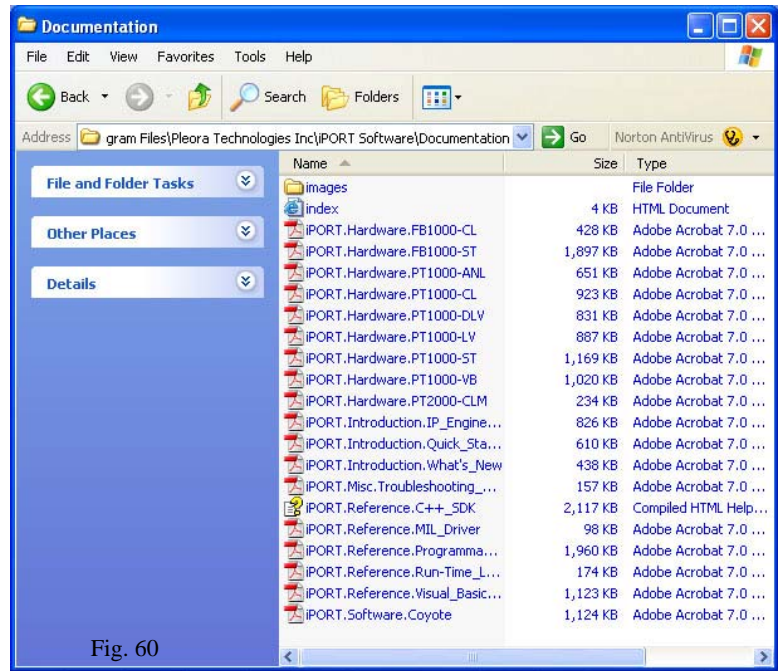


Fig. 60

### 9.1 iPort Coyote

About Coyote

Menus and Tabs

Main Menu

Image Saving tab

Configuration dialog

GenIcam XML Selection

Network Stack Port selection

Port Configuration dialog

Select Camera dialog

Connection tab

Diagnostic tab

Connection Flags dialog

IP Engine Selection

Options dialog

Pulse Generators dialog

Serial Port Configuration

Acquisition tab

Coyote dialogs

Custom Tap Reconstruction

Multi-Target Configuration

PLC Control Bits dialog

Save Device configuration to flash

Set IP Engine IP Address

### 9.2 iPort IP Engine Instruction

Introduction

Overview of iPort IP Engines

iPort Connectivity Solution

Network Configurations

iPort Universal Filter Driver

PC Requirements

Applications

Acquisition features

Standard NIC Drivers

Ethernet Switch Requirements

Programmable Logic Controller

iPort High-performance Driver

Power Requirements

Coyote Application

File Menu

Display Menu

Device Information

Serial Port Link

Acquisition control

Frame Save

Device Menu

Help Menu

IP Information

Time-Outs and Packets Device

Display

Tools Menu

Common Buttons

Heartbeat and Multi-Target Modes

Actions

Acquisition Information

iPort Common Controls

Network Device Finder

Select Camera Dialog

Image Settings

Device Features

RGB Filter

Set IP Address Dialog

Camera Configuration Dialog

Pixel type

Grabber Features

Port Communication

Set Name Dialog

Grabber Settings

Tap Reconstruction

GPIO Control Bits

**Note:** This Pleora document is intended to the Pleora iPort modules.  
Some may not be applicable to GEViCAM products.



## Signal Handling

GPIO Control Block

GPIO Control Block Programming

Inputs

TTL Inputs

LVDS Inputs

Rescaler

Timestamp Triggers

Optically Isolated Input

Software GPIO Control Bits

Delayer

Feedback Inputs

Camera Inputs

Pulse generators

Counter

Outputs

TTL Outputs

Triggered Pulse Generators

Host PC Interrupt

Optically Isolated Output

Rescaler Input signal

Camera controls

Image Grabber Trigger

Counter events

GPIO Label Table

Examples

Third-Party Application Integration

### 9.3 e-Bus Instruction Quick Start

Setting up your e-Bus Driver Suite

Understanding the eBus drivers

Choosing your drivers

Configuring your NIC

Updating your drivers

### 9.4 iPort Instruction Quick Start

Setting up your iPort IP Engine

Installing eBus

Cabling your camera to your PC

Connecting to your iPort IP Engine

Acquiring images with your camera

Using iPort SDK

### 9.5 What's New in Version 2.3.1

GgiE Vision and GenICam Compliance

eBus Driver Suite

eBus Drivers

eBus Driver Installation Tool

Documentation Changes

User Interfaces

Window 64-Bit Support

Other Additions

### 9.6 PLC (Programmable Logic Controller) Reference

Understanding the PLC

Demonstrating the PLC in 10 minutes

Configuring the PLC with Coyote

IO Block

Video IO Block

Remote Control Block

Signal Routing Block

Look Up Table

Enhanced Function block

Image Control Block

Sample and Glossary of Signal names

*Note: This Pleora document is intended to the Pleora iPort modules.  
Some may not be applicable to GEViCAM products.*

## **9.7 Troubleshooting Guide**

### **9.7.1 Scope**

### **9.7.2 Installation Issues**

#### **9.7.2.1 Can't install the iPort SDK**

9.7.2.2 Pro/1000 Grabber Device (High performance driver) is missing in Device Manager.

9.7.2.3 Window could not find a match or the hardware in the specified file.

9.7.2.4 Sometimes the installed Filter Driver disappears and I have reboot.

### **9.7.3 Connection issues**

9.7.3.1 Can't detect an iPort IP engine in the network

9.7.3.2 I can connect and configure the iPort IP Engine, but I get CY\_RESULT\_TIMEOUT instead of images.

9.7.3.3 The frame rate is lower than expected (or what it used to be).

9.7.3.4 How do I set up multicasting?

9.7.3.5 In Multicast Mode, the frame mode sometimes drops.

9.7.3.6 In Multicast Mode, the network is flooded and PC users can't access the network.

9.7.3.7 Packet bursts are overflowing my network.

9.7.3.8 How do I set up my camera application to communicate over serial port on the PC?

### **9.7.4 High-Performance Driver Issues**

9.7.4.1 It takes too long to discover and IP address is invalid.

9.7.4.2 Device Finder doesn't detect all devices.

9.7.4.3 The DHCP/BOOTP IP address Assignment Function doesn't answer requests.

9.7.4.4 CPU usage is higher than expected.

9.7.4.5 Frames are lost, even at below-maximum data rates.

9.7.4.6 Can't acquire images

### **9.7.5 Universal Filter Driver Issues**

9.7.5.1 The iPort Universal IP filter Driver can't detect devices.

### **9.7.6 Imaging issues**

9.7.6.1 I'm getting a gray display and the frame rate is zero or closed to zero, but the error message isn't CY\_RESULT\_TIMEOUT.

9.7.6.2 My frame rate is low and my image is very strange or suddenly closes.

9.7.6.3 My image colors aren't right.

9.7.6.4 I have a black stripe on my image.

9.7.6.5 Half of my image is inverted.

9.7.6.6 How can I verify that frames are being lost?

### **9.7.7 Synchronization Issues**

9.7.7.1 How can I send an external trigger to the camera?

9.7.7.2 How do I trigger my camera with software?

### **9.7.8 Camera Issues**

9.7.8.1 My camera model isn't listed in your software.

9.7.8.2 How do I talk to the camera via serial port?

9.7.8.3 My program seems to be inconsistent with the camera I chose and I get strange behavior.

9.7.8.4 I have checked my camera with a frame grabber and I can't make it work with iPort.

9.7.8.5 How can I verify camera is up and running through an iPort IP Engine?

***Note: This Pleora document is intended to the Pleora iPort modules.  
Some may not be applicable to GEViCAM products.***



**MEMO**

***GEViCAM***  
***A GigE Vision Camera Company***

1392 Borregas Ave.  
Sunnyvale, CA 94089  
U.S.A.  
Tel:408-262-5772  
Fax:408-262-0962  
Email:info@gevicam.com  
Web site: www.gevicam.com

***GEVICAM Inc.***  
GD Series Manual  
Version: A.0.1  
Date: 8-17-07